

WARNING!

Do not under any circumstances attempt to remove the machine covers or attempt to repair the IJ40/50/60. There are no operator serviceable parts thereunder.

The IJ40/50/60 product is licensed for use under the conditions of the Post Office. This license is issued subject to the product being secure at all times. Any removal of covers or dis-assembly of the product will result in the license being revoked and may result in the Post Office requesting Neopost to remove the product from use. The ink cartridge system used within the IJ40/50/60 contains Post Office approved ink. This cartridge should not be tampered with in any way or the use of non approved inks be undertaken. This will breach any Post Office licence agreement on the product and may result in the Post Office requesting Neopost to remove the product from use.

FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

MODEM APPROVAL REQUIREMENTS

This equipment contains a modem which has been approved for connection to analog public switched telephone networks. However, due to differences between individual telephone networks provided in different areas, the approval does not, of itself, give an unconditional assurance of successful operation on every network termination point.

In the event of problems, you should contact your equipment supplier in the first instance.

INSTALLATION

The power plug on this equipment is intended to serve as the device for isolation of the electrical supply. The equipment should be installed in close proximity to an easily accessible grounded power supply and analog telephone socket.

WARNING: FOR SAFETY THIS EQUIPMENT MUST BE GROUNDED

The IJ40, IJ50 and IJ60 Mailing Machines have been designed to meet the safety requirements of UL 1950. The peripheral interfaces meet the SELV requirements of that standard, therefore in order to maintain the level of safety provided by the IJ40, IJ50 and IJ60, the interface of any equipment connected to the IJ40, IJ50 and IJ60 interfaces must also meet the SELV requirements of UL 1950. No part of this document may be reproduced or transmitted in any form or by means, electronic or mechanical, for any purpose without the express written permission of Neopost Inc.

Copyright© Neopost 2004

WELCOME

Congratulations on choosing the Neopost IJ40/50/60 mailing system. The IJ40/50/60 is the result of the expertise and innovative capabilities of the worldwide Neopost group and, using ink jet technology, it will integrate into your working environment to enhance your mail processing operation.

The IJ40/50/60 has many capabilities that will be important to your business:

As well as being productive (up to 6600 items per hour), the IJ40/50/60 is designed to be a user friendly machine that can fit into any working environment with its innovative and attractive design, simple user settings and very low noise level. The high volume capacity and sealed inker makes it easy and safe to handle, and the user interface is particularly clear with a graphic interface and 5 memories to store favourite jobs.

The IJ40/50/60 is adaptable and as such can handle many different types of mail up to 3/8" thick. The optional feeder can be used to process, in a continuous cycle, items of sizes ranging from DL to C4 and up to 1/4" thickness. For thicker mail items or packages, adhesive labels can be automatically dispensed.

The IJ40/50/60 is connectable. It can exchange data with Neopost scales and printers in order to provide optimal mail processing and reporting.

Finally, the IJ40/50/60 is a unique communication tool for your company. Its high quality printing combined with its integrated library of message/adverts, mini dies and free format text will afford you extra tools to enhance your company's image and the impact of your mail.

CONTENTS

1. INSTALLATION	9
1.1 Introduction	9
1.2 Fitting the Moistener Unit Wick	10
1.3 Attach the Moistener Unit/Platform Infill to the Plain Platform	10
1.4 Attach the Moistener/Platform Infill to the Autofeed ..	11
1.5 Attach the IJ40/50/60 to the Hand Feed Platform or Autofeed	11
1.6 Attach the Weigh Platform & Support (Option)	12
1.7 Fill the Label Dispenser	12
1.8 Machine Connections	13
1.9 Machine Connections (continued)	14
1.10 Position Receiving Tray	15
1.11 Filling the Moistener Unit Reservoir	15
1.12 Differential weighing (optional) activation	16
2. CONTROLS AND FEATURES	20
2.1 Introduction	20
2.2 Machine	21
2.2.1 Display Panel	23
2.2.2 Function Keys	24
3. PRINTING POSTAGE	25
3.1 Introduction	25
3.2 Getting started	26
3.2.1 Log On (Pin Entry Mode)	26
3.2.2 Departmental Operation	27
3.2.3 How To Select a Postage Value	28
3.2.4 High Value Selection	29
3.2.5 Printing an Envelope	31
3.2.6 To Change a Department	31
3.2.7 PC connection for MailManager (PC Mail accounting)	32

4. POSTAGE CLEARING WITH AUTOFEED	37
4.1 Envelope feeding	37
4.2 Envelope misfeed	39
5. PRINTING LABELS	41
5.1 Filling the Label Dispenser	41
5.2 Printing a Label	42
6. PRINTING WITH WEIGH PLATFORM	43
6.1 Weigh Platform Preparation	43
6.2 Tare Function	46
6.3 Using differential weighing (optional)	46
7. ENVELOPE MOISTENER	49
7.1 Using the Envelope Moistener with Plain Platform ...	49
7.2 Using the Envelope Moistener with an Autofeed	49
7.3 Filling the reservoir	50
8. PRINTING OPTIONS	51
8.1 What can I print?	51
8.2 Print mode selection	52
8.3 Modifying the imprint	53
8.3.1 Choosing a Slogan, Rate Die or Text	53
8.3.2 Date Advance (for Pre Dating Mail)	54
9. MAINTAINING PRINT QUALITY	56
9.1 Cleaning the Ink Cartridge	56
9.2 Making a Test Print	57
9.3 Replacing an Ink Cartridge	59
10. METER REGISTERS	62
10.1 Selection	62
10.2 Printing a Register	63
10.3 Printing with External Printer	64
11. ADDING POSTAGE	65
11.1 Warning pending Credit' Procedure	66
11.2 Clearing a PO lockout	66

12. MAINTAINING YOUR ACCOUNT	68
12.1 Account number	68
12.2 Account balance	68
12.3 Statements	68
12.4 Post Office regulations	68
12.5 No Deposit Postage-On-Call Account.....	69
12.6 Standard Deposit Postage-On-Call Account	69
12.7 USPS Trust Account Regional Remittance Lock Boxes	71
12.8 Zip Code to Regional Remittance Lock Box Reference Table (Use first 3 digits of zip code)	71
13. MEMORY FUNCTIONS	72
13.1 Saving a Memory Function	72
13.2 Recalling a Memory Function	73
14. SUPERVISOR SETTINGS	74
14.1 Introduction	74
14.2 Entry to SUPERVISOR mode	75
14.3 Departments control	77
14.3.1 Changing the User PIN	78
14.3.2 To Assign a Department	79
14.4 IJ40/50/60 machine setup menu	83
14.5 Memory Cards	91
14.5.1 How To Load Data Using a Memory Card	91
14.5.2 How To Replace Data Using a Memory Card .	92
15. REPORTS	93
15.1 Typical Reports	93
15.2 Printing a Report	93
15.3 Setting the Report Destination	95
15.4 Printing with External Printer	95

16. TROUBLE SHOOTING	97
17. QUICK REFERENCE GUIDE	101
18. INTERNATIONAL LETTER POST COUNTRY	
CODE CHART	100
19. ORDERING SUPPLIES	102

Special icons



Signals an essential piece of information that cannot be missed.



Signals an important issue.



Indicates an interesting idea or trick



Illustration through an example

1. INSTALLATION

1.1 Introduction

Your IJ40/50/60 should be installed on a flat horizontal surface adjacent to easily accessible power and telephone line outlets.

Allow sufficient free space as follows:

- above the machine to enable opening of the covers.
- at the rear of the machine for cooling.

The power plug on this equipment is intended to serve as the device for isolation of the mains supply, where possible it is advisable to connect to a switched power outlet.


Please do not connect your IJ40/50/60 Mailing machine to the power outlet until you have attached the accessories.

1.2 Fitting the Moistener Unit Wick

First remove the moistening wick from its packaging.
Before fitting ensure that the wick is thoroughly wetted.
Raise the brush, then take the wetted wick and feed into the water trough as shown.
Lower the brush into place.


1.3 Attach the Moistener Unit/Platform Infill to the Plain Platform

When attaching the Moistener Unit/ Platform Infill to the Plain Platform, ensure that the Tabs and Slots interlock as illustrated.

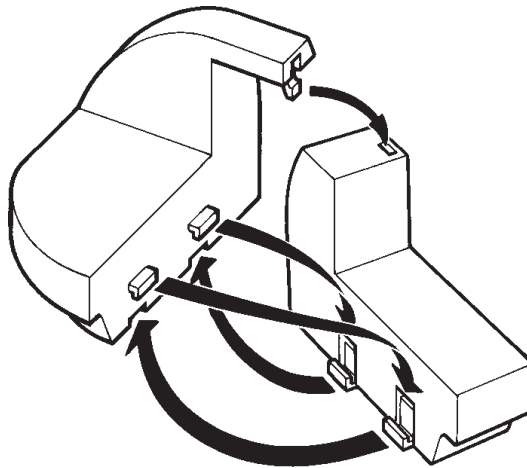


1.4 Attach the Moistener/Platform Infill to the Autofeed

If an Autofeed is to be fitted, first attach the Moistener Unit/Platform Infill to the Autofeed ensuring that the slots on the Autofeed fit tightly over the tabs on the Moistener Unit/Infill Platform as illustrated.

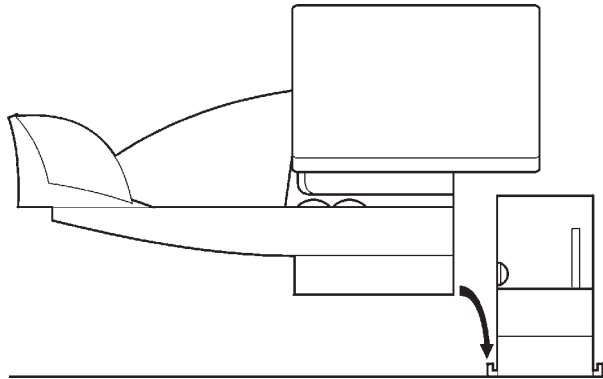

1.5 Attach the IJ40/50/60 to the Hand Feed Platform or Autofeed

Lower the IJ40/50/60 into position so that the slots fit over the tabs as illustrated.

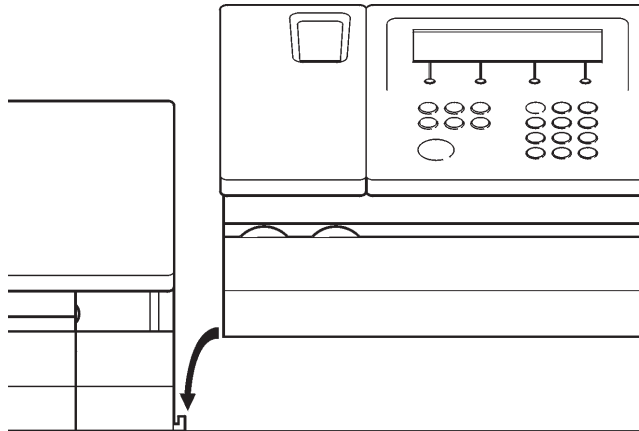


1.6 Attach the Weigh Platform & Support (Option)


Sufficient cable has been provided with your weigh platform to enable the unit to be placed on the desk adjacent to the postage meter if this is preferred.

Position the weigh platform on its support. Excess cable can be loosely coiled under the support.



Position the Support Platform so that the pins on the underside fit into the locating points on the rear casing of the IJ40/50/60.

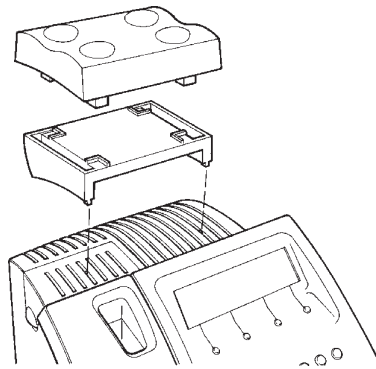



1.7 Fill the Label Dispenser

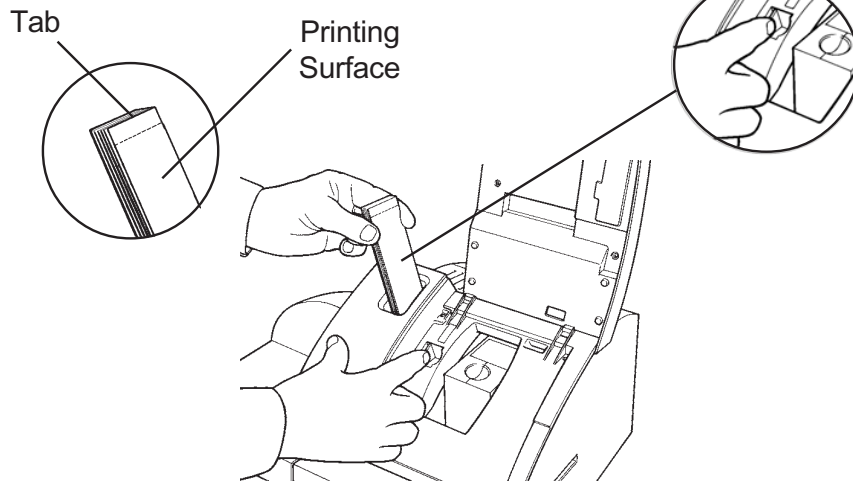


1.8 Machine Connections

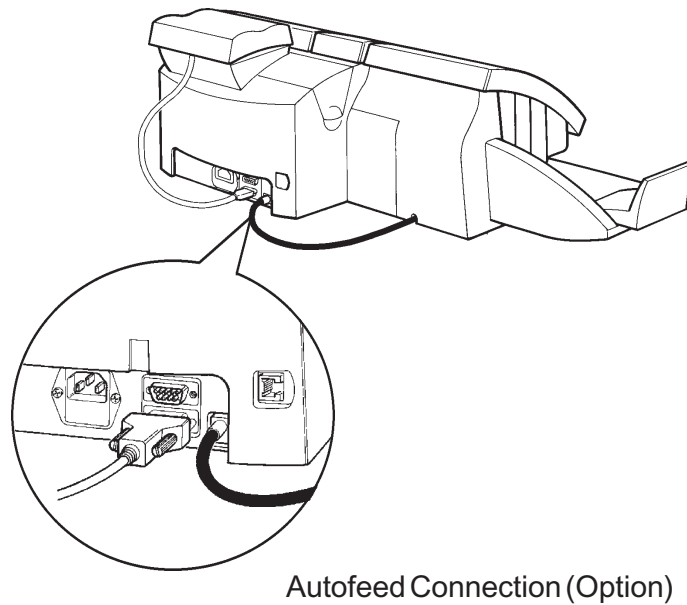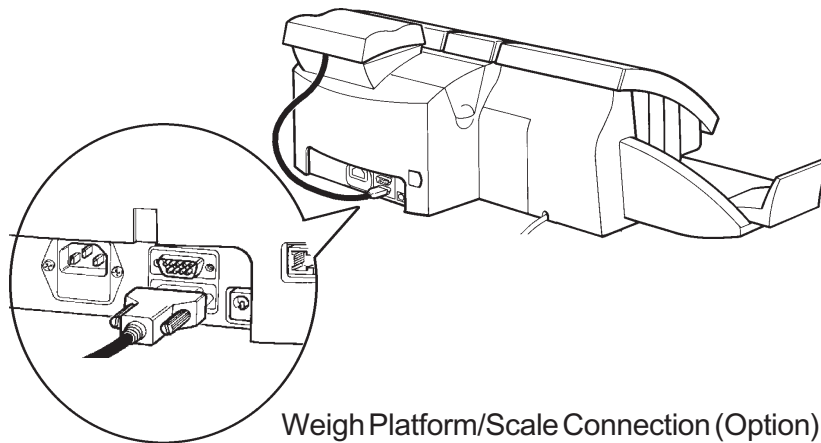

1.9 Machine Connections (continued)

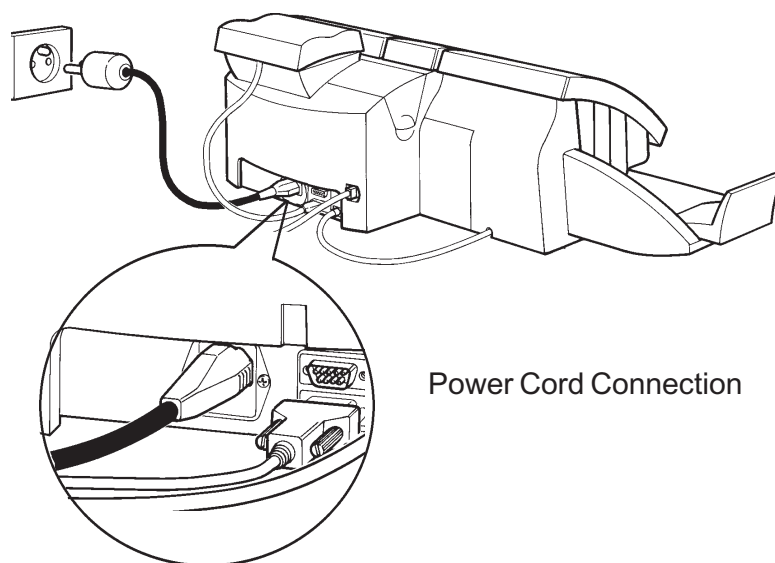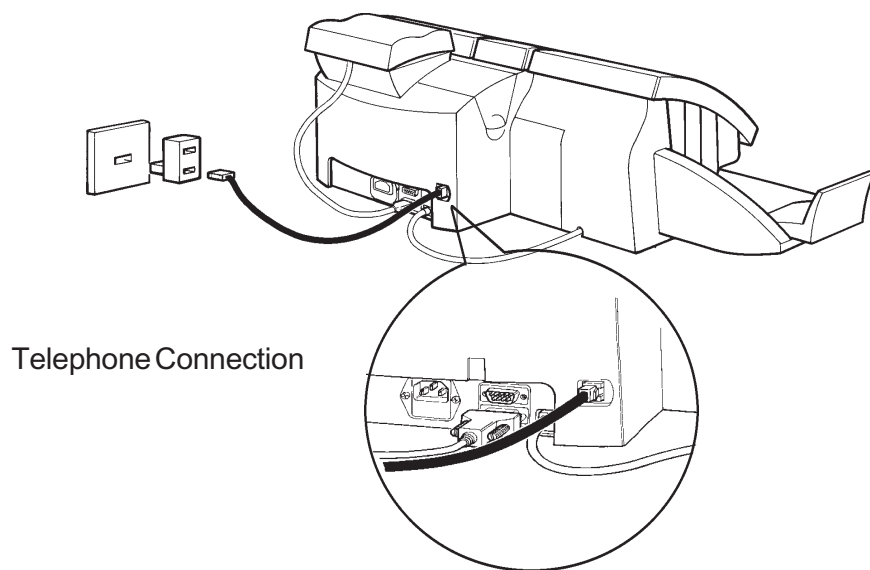


1.10 Position Receiving Tray

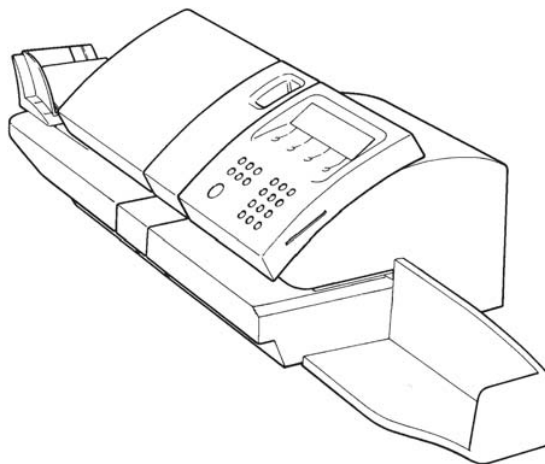

1.11 Filling the Moistener Unit Reservoir


For safety, always disconnect the postage meter from the power supply when filling the moistener reservoir, keep the postage meter top cover closed and take care not to spill sealing solution onto the machine.


Open the reservoir compartment and fill with Neoseal sealing solution.

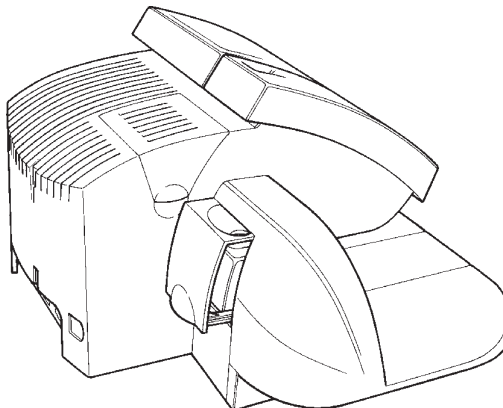





Close the reservoir compartment.

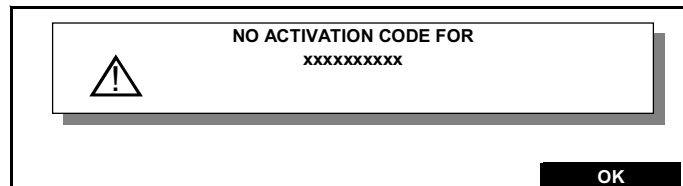
1.12 Differential weighing (optional) activation




- In user mode, press , the below screen will be displayed:





(where xxxxxxxxxx is the machine number).

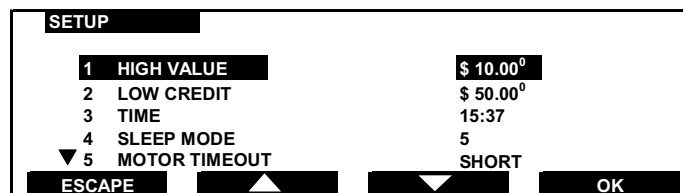

- Press , then  and  to enter in supervisor mode.
- Select "SETUP" and press ; the following menu is displayed:

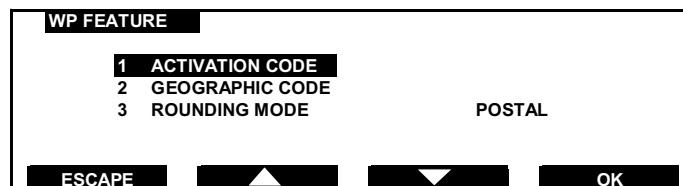


- Select "14 WP FEATURE" (by pressing  or , or entering 14), and press ; the following menu is displayed:



 **The ROUNDING MODE doesn't exist if the WP is not activated.**

- Select "ACTIVATION CODE" and press .
- Enter the activation code printed onto the licence leaflet provided with the weigh platform with numeric keypad, and press . The following screen will be displayed:

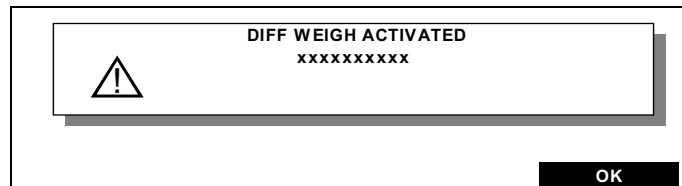


- Press **OK**.
- Now, select "GEOGRAPHIC CODE" in the "WP FEATURE" screen and press **OK**.
- Locate your town on a map, read the latitude and the altitude, and find the geographic code in the table 2 pages farther.
- Enter this code.



Washington's latitude is between 39° and the 40°, and the altitude is under 650 ft, so the code is 10528.

- Now, select "ROUNDING MODE" in the "WP FEATURE" screen and press **OK**.
- Select RETAIL OR POSTAL and press **OK**.
- Press **ESCAPE** three times to return to the basic screen.

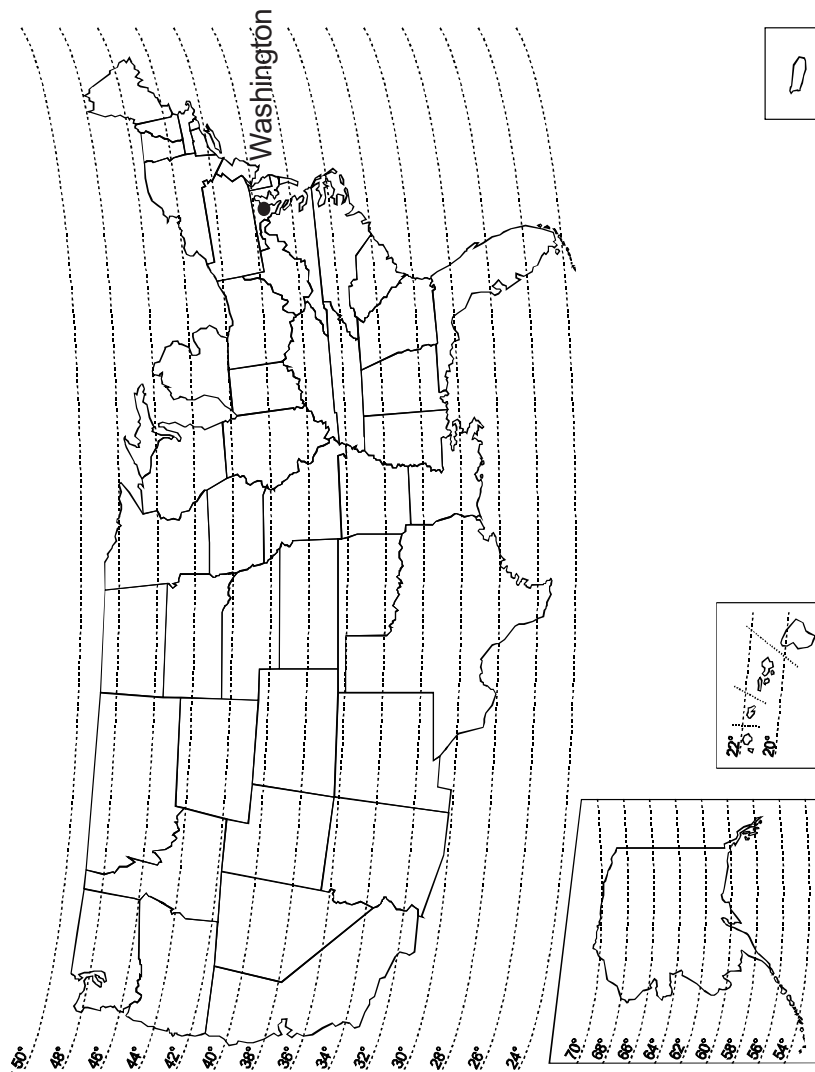

Latitude	Altitude									
	0 m / 0 ft	200 m / 650 ft	400 m / 1300 ft	600 m / 1950 ft	800 m / 2600 ft	1000 m / 3300 ft	1200 m / 3950 ft	1400 m / 4600 ft	1600 m / 5250 ft	1800 m / 5900 ft
20°	10764	10771	10788		10795	10801	10818	10825	10832	10849
21°	10757	10764	10771	10788	10795	10801	10818	10825	10832	
22°	10740	10757	10764	10771	10788	10795	10801	10818	10825	
23°	10733	10740	10757	10764	10771	10788	10795	10801	10818	
24°	10726	10733	10740	10757	10764	10771	10788	10795	10801	
25°	10719	10726	10733	10740	10757	10764	10771	10788	10795	
26°	10702	10719	10726	10733	10740	10757	10764	10771	10788	
27°	10696	10702	10719	10726	10726	10733	10740	10757	10764	
28°	10672	10689	10696	10702	10719	10726	10733	10740	10757	
29°	10665	10672	10689	10696	10702	10719	10726	10733	10740	
30°	10658	10665	10672	10689	10696	10702	10719	10726	10733	
31°	10634	10641	10658	10665	10672	10689	10696	10702	10719	
32°	10627	10634	10641	10658	10665	10672	10689	10696	10702	
33°	10610	10627	10634	10641	10658	10665	10672	10689	10702	
34°	10597	10603	10610	10627	10634	10641	10658	10665	10672	
35°	10580	10597	10603	10610	10627	10634	10641	10658	10665	
36°	10566	10573	10580	10597	10603	10610	10627	10634	10641	
37°	10559	10566	10573	10580	10597	10603	10610	10627	10634	
38°	10542	10542	10559	10566	10573	10580	10597	10603	10610	
39°	10528	10535	10542	10559	10566	10573	10580	10597	10603	
40°	10511	10528	10528	10535	10542	10559	10566	10573	10580	
41°	10498	10504	10511	10528	10535	10542	10559	10566	10573	
42°	10481	10498	10498	10504	10511	10528	10535	10542	10559	
43°	10467	10474	10481	10498	10504	10511	10528	10535	10542	
44°	10450	10450	10467	10474	10481	10498	10504	10511	10528	
45°	10436	10443	10450	10467	10474	10481	10498	10504	10511	
46°	10429	10429	10436	10443	10450	10467	10474	10481	10498	
47°	10405	10412	10429	10436	10443	10450	10467	10474	10481	
48°	10399	10399	10405	10412	10429	10436	10443	10450	10467	
49°	10375	10382	10399	10405	10412	10429	10436	10443	10450	
50°	10368	10368	10375	10382	10399	10405	10412	10429	10436	
51°	10344	10351	10368	10375	10382	10399	10405	10412	10429	
52°	10337	10344	10344	10351	10368	10375	10382	10399	10405	
53°	10313	10320	10337	10344	10351	10368	10375	10382	10399	
54°	10306	10313	10320	10337	10344	10344	10351	10368	10375	
55°	10283	10290	10306	10313	10320	10337	10344	10351	10368	
56°	10276	10283	10290	10306	10313	10320	10337	10344	10351	
57°	10252	10269	10276	10283	10290	10306	10313	10320	10337	
58°	10245	10252	10269	10276	10283	10290	10306	10313	10320	
59°	10238	10245	10252	10269	10276	10283	10290	10290	10306	
60°	10214	10221	10238	10245	10252	10269	10276	10283	10290	
61°	10207	10214	10221	10238	10245	10252	10269	10276	10283	
62°	10191	10207	10214	10221	10238	10245	10252	10269	10276	
63°	10184	10191	10207	10214	10221	10221	10238	10245	10252	
64°	10177	10177	10184	10191	10207	10214	10221	10238	10245	
65°	10153	10160	10177	10184	10191	10207	10214	10221	10238	
66°	10146	10153	10160	10177	10184	10191	10207	10214	10221	
67°	10139	10146	10153	10160	10177	10184	10191	10207	10214	
68°	10122	10139	10146	10153	10160	10177	10184	10191	10207	
69°	10115	10122	10139	10146	10153	10160	10177	10184	10191	
70°										


2. CONTROLS AND FEATURES

2.1 Introduction

The following pages detail the Controls and Features associated with your IJ40/50/60 Mailing machine, please take the time to read them carefully.


2.2 Machine

- | | |
|--|---|
| 1. Display | presents a visual indication of the machine set up and status. |
| 2. Soft Keys | keys with functions as depicted on the display. |
| 3. Numerical Keypad & Function Keys | enables the operator to access user functions. |
| 4. Start/Stop Button | used to Start/Stop the Machine. |
| 5. Autofeed | Automatic envelope feeder |
| 6. Envelope Guide | adjustable envelope guide. |
| 7. Side Guide | adjustable envelope guide. |
| 8. Feed Platform | provides a flat surface to assist feeding of mail. |
| 9. Receiving Tray | collects printed mail. |
| 10. Weigh Platform | in conjunction with the IJ40/50/60 will weigh and calculate postage for items up to 5 pounds |
| 11. Weigh Platform Support | supports the weigh platform and provides a cable tidy. |
| 12. Precut Label Dispenser | holds up to 50 labels. |
| 13. Label Release Lever | release to fill the Precut Label Dispenser. |
| 14. Infill Unit | standard supplied Infill Platform or optional Moistener Platform. |
| 15. Memory Card Reader | used to load new postage rate and customer data. |
| 16. Ink Cartridge | Ink Cartridge/Printing Head. |
| 17. Power Input | 110- 120V AC 60Hz input. |
| 18. Accessory Port | connection for printer, PC connection. |
| 19. Weigh Platform Connection | connection for weigh platform or external scale. |
| 20. Autofeed Connector | connection for Autofeed Unit. |
| 21. Telephone Socket | enables connection to Postage-On-Call® Reset Center - analog phone line is required (same as standard fax machines) |
| 22. Meter Cover | may be removed to allow access to meter. |

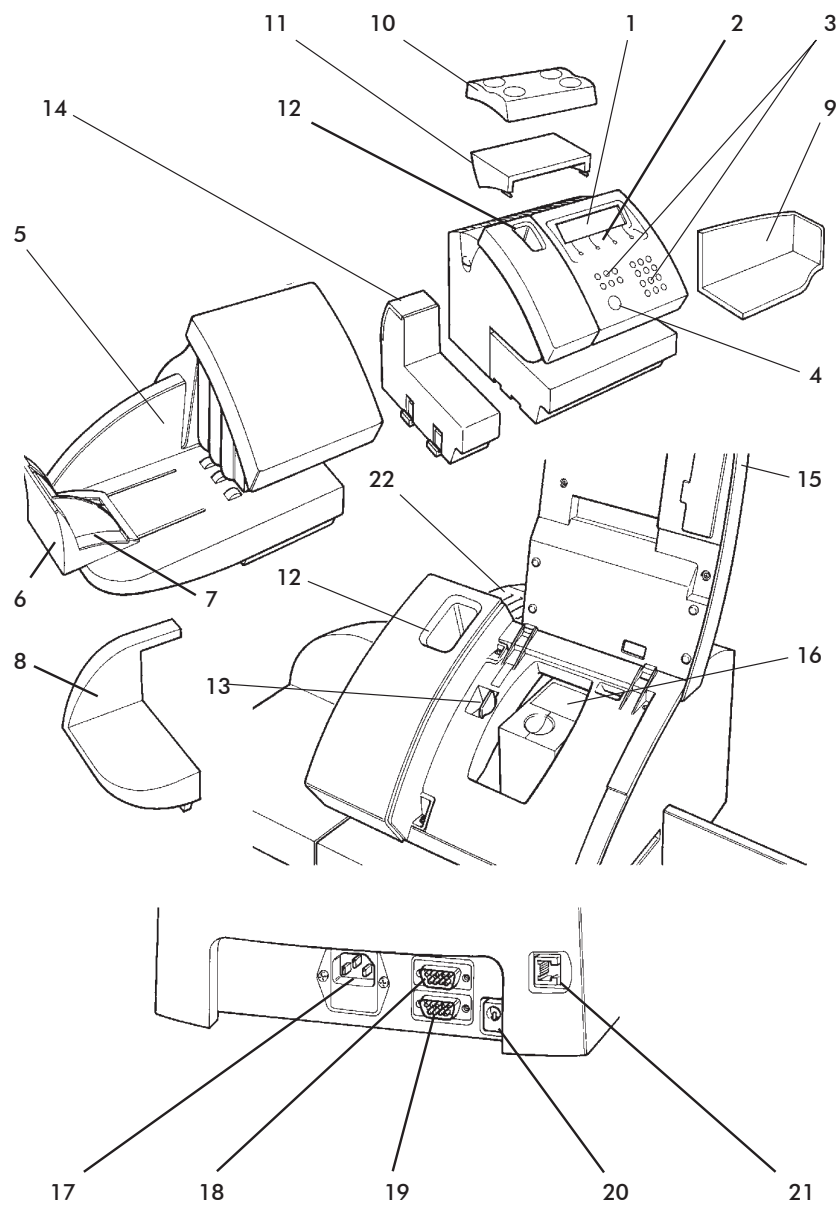

22 Controls and features

2.2.1 Display Panel

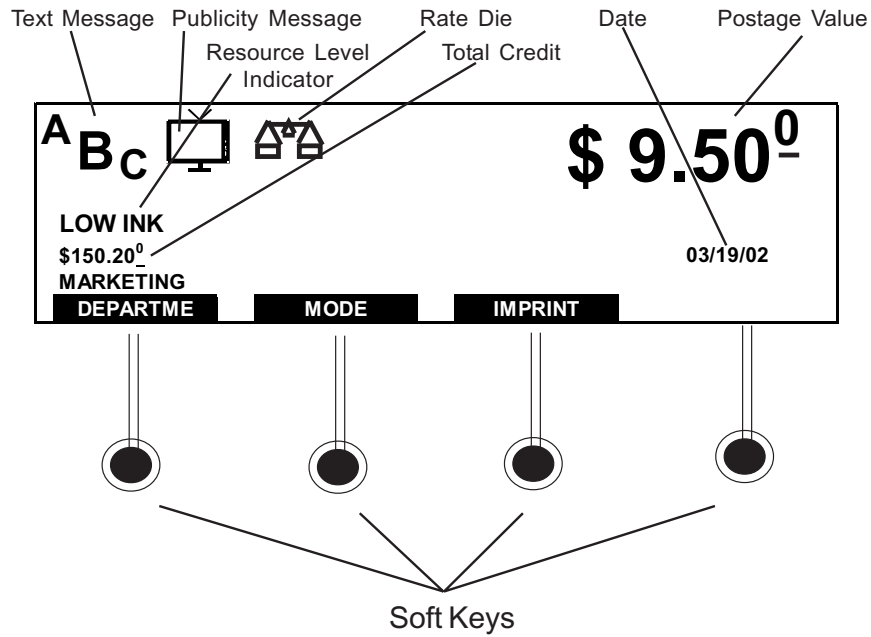

Function Keys



Envelope/Label Feed
Start/Stop Button







Numerical Keypad



Clear Key

Confirmation
Key

2.2.2 Function Keys


-  Job Memory Key : Storing and recalling memorised jobs.
(please refer to Memory functions)
-  Label Key : Label mode selection.
(please refer to Printing labels)
-  Menu Key : Access to Function Menu.
-  Lock : Return to Standby/Locking.
-  Funds Key : Access to Recredit.
(please refer to Adding postage)
-  Weigh Platform Key : Weigh Platform Mode Selection
(please refer to Printing with weigh platform)

3. PRINTING POSTAGE

3.1 Introduction

In order to achieve the best impression, your IJ40/50/60 requires an even surface on which to print, therefore on bulky or uneven items correct folding of the contents will help considerably. Use a label if in doubt.

It is sometimes unavoidable that your mail will contain staples, paper clips and other fixings. The machine will accept these, but it is recommended that the fixings are situated at the bottom of the envelope. This will avoid the risk of damage to your printing head. In the event that a satisfactory print cannot be achieved due to bulky contents (Max.3/8") the envelope should be treated as a packet and a label used.

It is recommended that the IJ40/50/60 is left powered on at all times. This will assist in maintaining print quality. In the event that you have to power the machine down, first press  to allow the machine to return to standby mode, then wait for approximately one minute to allow the ink cartridge to return to the park position before removing the power.


3.2 Getting started

3.2.1 Log On (Pin Entry Mode)

To enter **USER** mode from the Standby screen:



Press the **USER** key. The machine will enter Ready mode. If the machine is protected by a **USER PIN**, the following screen will be observed:

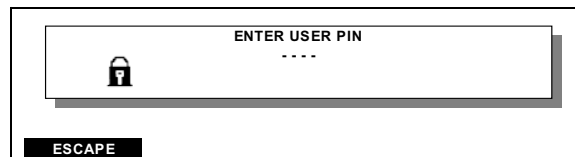

 *This number may be changed or removed by the supervisor, please refer to Supervisor Settings.*

If the correct PIN is entered the Ready Mode screen will be observed.



If an incorrect PIN is entered the machine will continue to prompt for **USER PIN** entry.

If an incorrect PIN is entered for eight or more attempts, the meter will be locked, in this event please refer to Setting the User Status.

The Default Stamp Value is factory set to \$0.00, to change this value, please refer to Supervisor Settings.



The machine is supplied with all departments set to OFF. In order to activate the departments, please refer to Departments Control.

3.2.2 Departmental Operation

If your machine has been set for departmental operation a list of available departments will be observed:

DEPT

1 MARKETING
2 ACCOUNTS
3 SALES
4
5

ESCAPE [up] [down] OK

Using the [up] and [down] keys, or an appropriate number key, select your department from the list and press [OK] to confirm.

If your department is protected, you will be prompted to enter your Department PIN:

ENTER DEPARTMENT PIN

ESCAPE

Enter the PIN using the numerical keypad. If the PIN is correct the Department Ready screen will be observed:

\$0.00⁰

\$150.20⁷
MARKETING

03/19/02

DEPT MODE IMPRINT

If not you will be prompted to try again. (The Department PIN is not the same as the User PIN. The Department PIN may be changed or removed by the supervisor, please refer to page Departments control).

If your department is not protected, you will not be prompted to enter the Department PIN and the **Department Ready** screen will be observed.

3.2.3 How To Select a Postage Value

Using the numerical keypad, enter the required postage, (e.g. 95 cents press (9) (5)) the value display will flash:



If an incorrect value is entered, press **ESCAPE** and enter the correct value.


To confirm the value, press **OK**, the following display will now be observed.



*The **DEPT** icon will only be present if the machine is set for departmental operation.*

Low Credit

When machine credit falls below or equal to the low credit level, the **LOW CREDIT** indicator will be observed:

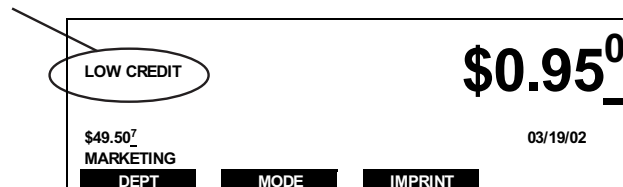


28 Printing postage

It is now time to add more credit, please refer to "Adding postage".
The default Low Credit value is factory set to \$50.00, to change this value please refer to Machine setup.

Insufficient Credit

When the value selected exceeds the available credit, printing will be disabled and the **INSUFFICIENT CREDIT** screen will be observed:

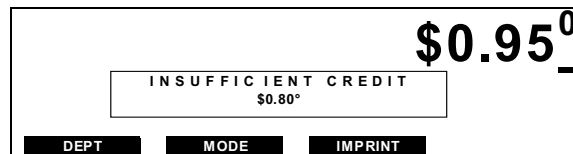

To **ADD CREDIT**, please refer to Adding postage.


3.2.4 High Value Selection

If a value greater than or equal to the High Value setting is selected, the machine will not print unless the high value setting is confirmed. The default High Value Threshold is set at \$10.00 (To change the High Value setting, please refer to Supervisor Settings).

Printing a high value

From Ready Mode, set the required postage value (e.g. \$12.50) and press **OK** to confirm.

The **High Value** warning screen will now be observed:

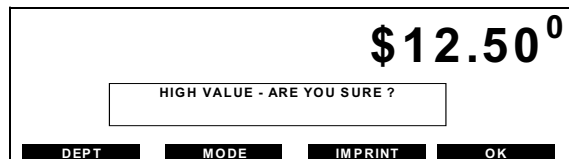

Printing is disabled.

Press **OK** to return to Ready Mode screen with the High Value confirmed.

Printing postage 29

If you wish to reject the High Value value selection, enter the correct value and press **OK** to confirm. The High Value Warning will be observed, if the value is now correct press **OK** to return to Ready Mode with the new high value confirmed.

If you are printing more than one item at a high value, always check that the value is correct for all items being processed.




The High Value Warning is automatically suppressed when values are received from a Weigh Platform.

**YOU ARE NOW READY TO PROCESS
YOUR MAIL**


3.2.5 Printing an Envelope

Insert the envelope with the side to be printed facing upwards as illustrated.



Press the  button; after a short pause, the motor will start. Printed envelopes will subsequently be deposited into the receiving tray.

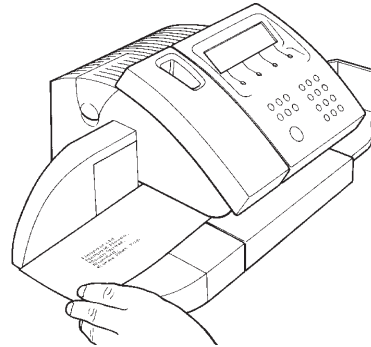


For an envelope exceeding 3/8" thick, a label must be used, refer to Printing labels.



3.2.6 To Change a Department

From Department Ready Mode, press the **DEPT** button to display the list of available departments, then using the  and  keys, or the appropriate number key, select your department from the list.

Press  to confirm.

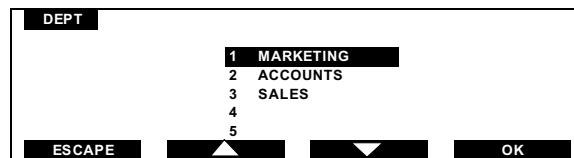

If the department is protected, you will be prompted to enter your new Department PIN.

If the PIN is correct the new Department Ready screen will be observed:

If the PIN is correct the new Department Ready screen will be observed:



If the PIN is incorrect the prompt to enter the Department PIN will be repeated.


To Log Off


From any screen, press the  key to go to the Standby screen.

3.2.7 PC connection for MailManager (PC Mail accounting)


The Mailing machine is connected to a PC incorporating a Mail Accounting software, MailManager II, which compiles the postage use sent by the mailing machine.

When switching on the mailing machine, MailManager II is automatically activated on the PC and the following screen is displayed:

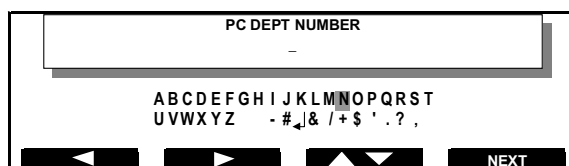

- Enter the department number via the numeric keypad.
- Enter the PIN number if required by selecting PIN CODE in the previous screen.
- Validate by pressing  .


The department number and PIN are sent to the PC for verification:

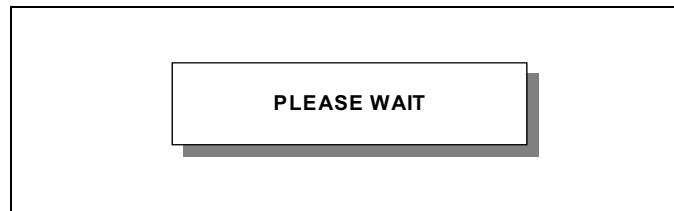

If the department number (or the PIN number) is not correct, an error message is displayed.

Be aware that the PC should be on and MailManager open before the mailing machine is switched on. The postal service, department number and processing type (label or envelope) can be selected from the scale.

In case of a connection problem between the mailing machine and the PC, the mailing machine will display the following message:

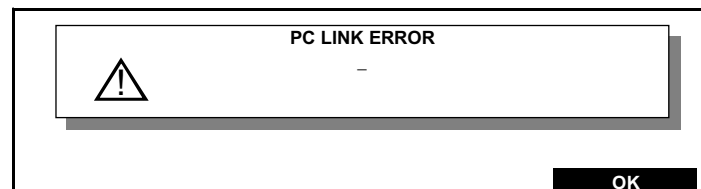

By pressing **OK**, the machine returns to the main screen.

See "PC absent mode" in section "PC connection recovery mode".

PC CONNECTION SETUP

- Start the PC application on the PC and connect the PC to the base (on the connector named COM1).
- In the supervisor screen, select SETUP, then PC CONNECTION

SETUP	
▲ 11 REPORT ON	
12 PC CONNECTION	
13 LOCK KEYBOARD	DISABLED
14 WP FEATURE	

ESCAPE ▲ ▼ OK

- Scroll down to "PC ABSENT MODE" and select "ENABLED":

PC CONNECTION	
1 PC LINK	DISABLED
2 PC ABSENT MODE	DISABLED

ESCAPE ▲ ▼ OK


- Then do a power cycle of the base.
The supervisor may choose the recovery mode of the PC connection (see the following paragraph)

PC CONNECTION RECOVERY MODE

In case of a connection problem between the mailing machine and the PC, the PC connection recovery mode enables the mailing machine to store in memory the partial postage data and to transmit them to the PC as soon as the connection is re-established. These data will show the total postage amount printed and the total number of items without distinguishing postal services used.


To switch the system to Recovery Mode (PC absent mode)

Enter in supervisor mode:

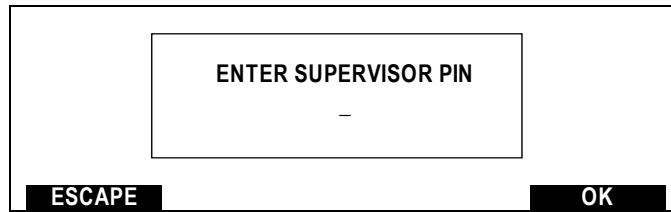


A rectangular screen with a white background. In the center is a smaller white rectangle containing the text "ENTER SUPERVISOR PIN" and a single underscore character below it. At the bottom of the screen are two black rectangular buttons with white text: "ESCAPE" on the left and "OK" on the right.

- The supervisor PIN number must be entered, then press **OK** .
- Select "SETUP", then "PC CONNECTION":

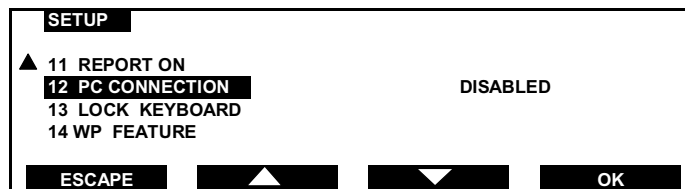

A rectangular screen with a white background. At the top left is a black button with white text "SETUP". Below it is a list of options: "11 REPORT ON", "12 PC CONNECTION", "13 LOCK KEYBOARD", and "14 WP FEATURE". To the right of "12 PC CONNECTION" is the word "DISABLED". At the bottom are four black buttons with white symbols or text: "ESCAPE", an upward arrow, a downward arrow, and "OK".

- Scroll down to "PC ABSENT MODE" and select "ENABLED":

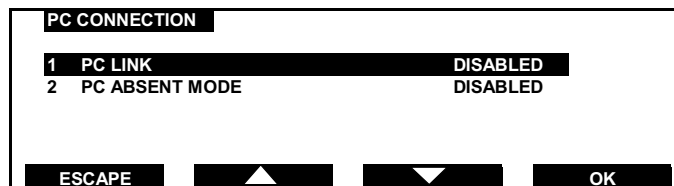

A rectangular screen with a white background. At the top left is a black button with white text "PC CONNECTION". Below it is a list of options: "1 PC LINK" and "2 PC ABSENT MODE". To the right of "1 PC LINK" is the word "DISABLED", and to the right of "2 PC ABSENT MODE" is the word "DISABLED". At the bottom are four black buttons with white symbols or text: "ESCAPE", an upward arrow, a downward arrow, and "OK".

- Press **OK** and then **ESCAPE** .

You are now ready to process items in PC connection recovery

Printing postage 35

mode. When the PC connection is re-established, the mailing machine will automatically switch back to PC ABSENT MODE LOCKED, after a screen "PC LINK ERROR".

When in PC (absent) Mode ACTIVE, the mailing machine can operate even though the PC connection (and MailManager) indicates a connection problem between the mailing machine and the PC.

4. POSTAGE CLEARING WITH AUTOFEED

Used in conjunction with the IJ40/50/60, the Automatic Feeder permits a large range of envelope sizes and thicknesses to be processed.


4.1 Envelope feeding

Check that all envelopes have been sorted into stacks of same size, thickness and denomination with the address facing upwards and the top edge of the envelopes all the same side of the stack.

Take one envelope from the stack and place it on the platform, address side upwards with the top edge against the left-hand side as shown.



Move the rear guide forward until the edge of the envelope aligns with the face of the guide.

Move the side guide towards the envelope leaving sufficient clearance to allow the envelope to move freely.

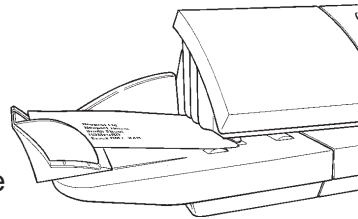

Return the envelope to its stack.


Fan the envelopes to separate them
Bevel the edge of the stack

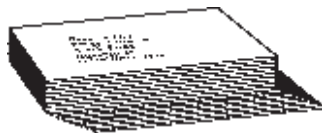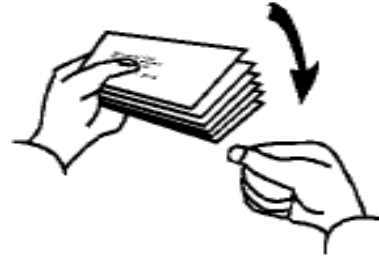

Place the envelopes on the feed platform, with their upper edge resting against the side guide as shown.

Ensure that the envelopes are stacked along the side and front guides. If necessary, re-adjust the side guide by resting it against the envelopes without pressing.

Press the  button,

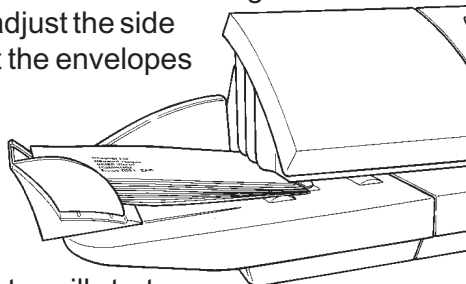

after a short pause the motor will start.
Printed envelopes will subsequently be deposited into the receiving tray.




Envelopes exceeding 1/4" in thickness should be hand fed, for an envelope exceeding 3/8" thick, a label must be used, refer to Printing labels.

4.2 Envelope misfeed

In the unlikely event of an envelope misfeed, the following procedure must be followed:


When using an Autofeed the whole of the following procedure must be followed, when an Autofeed is not connected, start from operation 7.

1. Remove all free envelopes from the feed tray;
2. Open the Autofeed top cover;
3. Using the thumb and fore finger, squeeze the sliders to release the feed mechanism as illustrated;
4. Remove the obstruction;
5. Close the feed mechanism by applying downwards pressure to the top of the feed mechanism until it is heard to click home;
6. Close the Autofeed top cover.

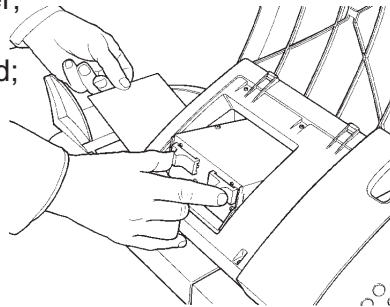

7. From Ready Mode, press the **MENU** key, the **MAIN MENU** screen will be observed:



8. Using the  and  keys, or the appropriate number key, move the cursor to **CLEAR MAIL PATH** and press **OK** to confirm, the following screen will be observed:



9. Press the  button.

After a short pause the track should clear and the screen return to the **MAIN MENU**.

10. Press **ESCAPE** to return to Ready Mode.

**You are now ready to resume processing
your mail**


5. PRINTING LABELS

5.1 Filling the Label Dispenser

The label dispenser is an integral part of the IJ40/50/60 Mailing machine and when filled will hold up to 50 labels.

Open the top cover to gain access to the label release lever.

Labels are inserted in the dispenser with the tab uppermost and the label side to be printed facing the direction of travel.

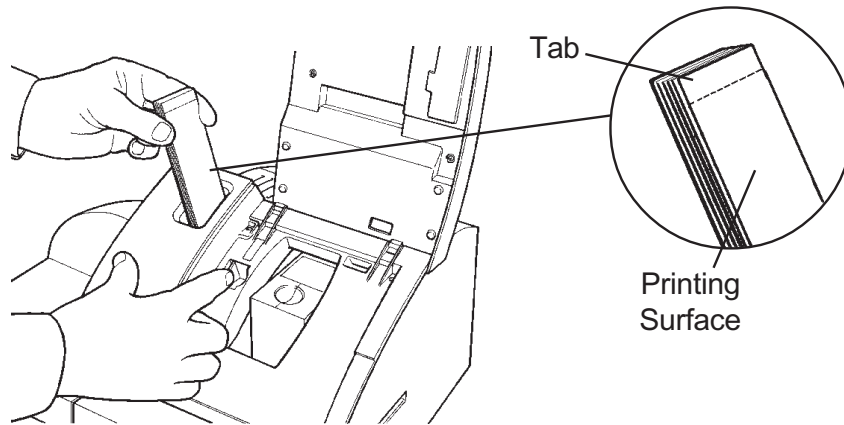


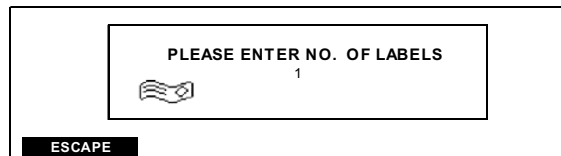
Using one finger, apply pressure to the label release lever thus allowing the labels to drop into contact with the feed mechanism, then release the lever.

Close the top cover.

Please refer to "Ordering Supplies" on page 102 for information on ordering Neopost approved supplies.

5.2 Printing a Label


When feeding labels, first select the postage value required, press the label key  the following screen will be observed:



To return to the **Ready Mode** screen with Label selection cancelled, press **ESCAPE**.

To print a single label press the  button, a single label will be printed at the displayed value.

If you are required to print more than one label, use the numerical key pad to enter the number of labels to be processed (1 - 99). If an incorrect quantity is entered, press **CANCEL** and re-enter the correct quantity.

To print labels press the  button.

The machine will print automatically the required number of labels at the displayed value.

If during the label printing process the following display is observed:



First replenish the label dispenser as detailed in "Filling the label hopper", then press **CONTINUE** to complete the label printing process. Take up the printed label, peel off the backing sheet and affix the label to the parcel or packet.

The machine will return automatically to the Ready Mode screen with label selection cancelled.

6. PRINTING WITH WEIGH PLATFORM

BENEFITS OF USING A WEIGH PLATFORM


Used in conjunction with your IJ40/50/60, the weigh platform will weigh and calculate the correct rate and value for items up to 5 pounds. Setting of values for printing is automatic.

When postal rates change, your machine may be updated by installing a Rate Card which can be obtained from Neopost.

For information relating to the installation of new postal rates, please refer to "Memory cards".

6.1 Weigh Platform Preparation

Ensure that the weigh platform is plugged in to the correct port at the back of the machine (please refer to Controls and Features and that the platform surface is clear of any obstruction.

From Ready mode, press .


The **WEIGH PLATFORM** screen will now be observed:

WEIGH PLATFORM	
1 RATE	1st Class/Priority
2 FORMAT	Letter
3 SERVICE	NONE
0.0 0z	
ACCEPT	MODIFY

Current **RATE** setting will be displayed.

If **NO WEIGH PLATFORM** is displayed instead of the **Weight and Postage Rate**, check scale connection and start again.



If the weight indicated exceeds 0g, press  to Zero the weigh platform.

HOW DO I CALCULATE THE CORRECT POSTAGE AND RATE?

To change the **RATE** setting press **MODIFY**, the **RATES** screen will be observed:

RATES	
1	1st Class/Priority
2	Priority Flat
3	Express PO-Addr
4	Parcel Post
5	Post Card

▼

ESCAPE ▲ ▼ SELECT

RATES	
▲ 6	BPM Flat
7	Int Air Letter
8	Global Pr Large Env
9	Global Pr Small Env
▼ 10	Global Pr by Weigh

ESCAPE ▲ ▼ SELECT

A list of **Postage Rates** currently available will now be displayed. To return to the previous screen with Rate setting unchanged, press **ESCAPE**.

Using the **▲** and **▼** keys, or the appropriate number key, select required Rate option from list, (e.g. **8 Global Pr Large Envelope**) press **SELECT** to confirm.

The following typical screen will now be observed:

WEIGH PLATFORM		
1	RATE	Global Pr Large Env
2	FORMAT	Letter
3	SERVICE	NONE



0.0 0z

ACCEPT ▲ ▼ MODIFY

For some rates, you will be prompted to make further selections.

Make your selection as required and return to the **WEIGH PLATFORM** screen.

Place item to be weighed on the platform, the weight and postage will be displayed.

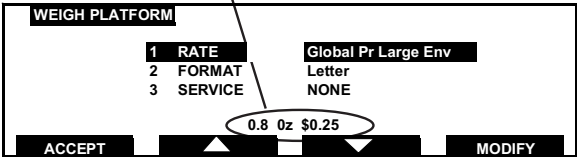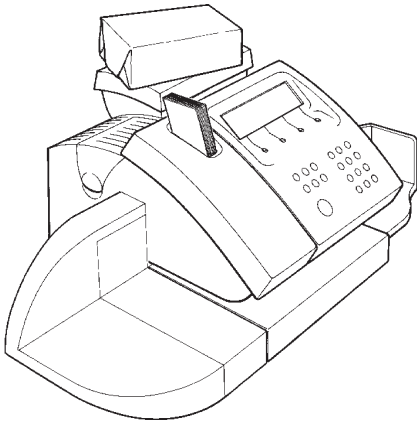




If you wish to accept the Postage displayed, press **ACCEPT** to return to Ready Mode with the postage value displayed.

YOU ARE NOW READY TO PRINT POSTAGE AT THE CORRECT POSTAGE VALUE





If you wish to reject the Postage displayed, press **MODIFY**, you will be returned to the **RATES** screen where you may revise your settings.

To weigh further items repeat the procedure.

6.2 Tare Function


1. Press: .
2. Place an empty container on the platform.
3. Press: , zero weight will now be displayed.
4. Place the filled container on the platform. The weight now displayed will be that of the contents of the container.
5. To return to normal use, clear the scale platform and press  the displayed weight will return to 0g.

6.3 Using differential weighing (optional)

- In USER MODE, press .
- Select "WEIGHING MODE" by pressing  or  and , and press ; the following screen is displayed:

WEIGHING MODE	
1	Standard
2	Differential

ESCAPE ▲ ▼ OK

- Select "Differential" by pressing (2) or ▲ and ▼, and press OK;
- Press ESCAPE.
- Press , the following screen is displayed:

DIFFERENTIAL WEIGHING		
1	RATE	1 st Class/Priority
2	DESTINATION	Canada
3	DEPT	PC ABSENT MODE
4	PRINT LABEL MODE	No label

OK ▲ ▼ MODIFY

- Select RATE and DESTINATION like in Standard mode;
- Select DEPT if in PC CONNECTION MODE
- Select PRINT LABEL MODE and press modify (if necessary), the following screen is displayed:

PRINT LABEL MODE	
1	No confirmation
2	A fter confirmation
3	No label

ESCAPE ▲ ▼ OK

- Select "No label" for example, and press OK.

The following screen is displayed:

DIFFERENTIAL WEIGHING		
REMOVE ONE ITEM	RATE	1C
PC ABSENT MODE	DEST,	
	FORMAT	Le
	SERV.	NONE
	LABEL	OFF
ESCAPE		MODIFY

- Place a stack of items (if it is not yet done) on the weighing platform, remove one item and print it.

7. ENVELOPE MOISTENER

Your IJ40/50/60 Postage Meter used in conjunction with a Moistener Unit will seal and print envelopes in a single operation.


The moistener may be set to non-seal mode if sealing is not required enabling the unit to be used as a normal feed platform.

If seal only is required, the postage meter mode may be set to **SEAL ONLY** (please refer to **PRINTING OPTIONS**).

The Moistener Unit may be used with an Autofeed Unit or with the Hand Feed Platform.

7.1 Using the Envelope Moistener with Plain Platform

Set the Moistener ON/OFF control to  (ON).

Press the  button, after a short pause the motor will start.


Each envelope must be fed into the moistener unit with the flap downwards and top edge against the platform mail guide. A two handed approach is preferable with particular attention being paid to keeping the envelope flat.

A continuous sliding action is made until the envelope contacts the postage meter rollers. The envelope will be drawn through the postage meter and deposited into the receiving tray.

7.2 Using the Envelope Moistener with an Autofeed

Set the Moistener ON/OFF control to  (ON).

Load the Autofeed Platform as detailed in "Postage printing with autofeed".

Press the  button, after a short pause the motor will start and sealed envelopes will be deposited into the receiving tray.

7.3 Filling the reservoir

For safety, always disconnect the postage meter from the power supply when filling the moistener reservoir, keep the postage meter top cover closed and take care not to spill sealing solution onto the machine.

Open the reservoir compartment and fill with water or Neopost sealing solution.

Close the reservoir compartment.

CAUTION

If sealing solution is spilt and enters the postage meter mechanism, **DO NOT** reconnect the machine to the power supply, **DO NOT** attempt to remove the machine covers, **CONTACT NEOPOST SERVICE**.

8. PRINTING OPTIONS


8.1 What can I print?

Your IJ40/50/60 is capable of operating in various modes:

IN NORMAL (POSTAGE) MODE

In Normal (Postage) mode, you can print postage, select a message from a number of pre-loaded messages (Slogans) or select one from two of your own design (when ordered from Neopost), in addition to a Slogan you can compose and print your own Text, you can also select from a number of Rate Dies. It is also possible to Advance Date your mail by up to seven days.


When fitted with a Moistener it is also possible to moisten and seal envelopes.

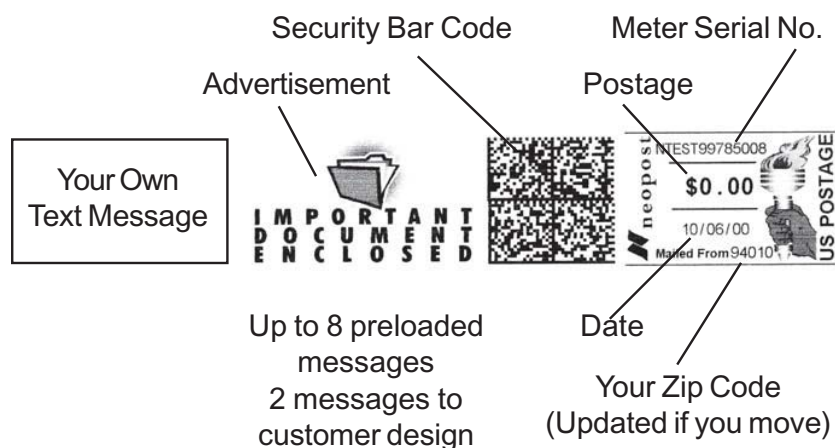

8.2 Print mode selection

From Ready Mode, press the **MODE** key, the **MODE** selection screen will be observed:

Current Mode will be displayed.

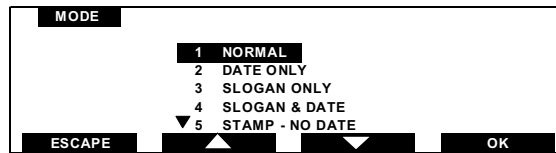

In addition to the Normal (Postage) Mode, the following functions may be accessed directly from the **MODE** screen:

- DATE ONLY : Prints the date instead of a postage imprint.
- SLOGAN ONLY : Prints a slogan instead of a postage imprint.
- SLOGAN & DATE : Prints a slogan and the date instead of a postage imprint. .
- STAMP: - NO DATE : Prints an undated stamp.
- PASS THROUGH : Moistens and seals envelopes only.

Using the **▲** and **▼** keys, or the appropriate number key, select required option from list, (e.g. **DATE ONLY**) press **OK** to confirm.



Or to return to **Ready Mode** with mode setting unchanged, press

ESCAPE .

8.3 Modifying the imprint

The IMPRINT menu is used to modify the setup of the imprint as follows:

From Ready Mode, press the **IMPRINT** key the following screen will be observed:

IMPRINT	
1 SLOGAN	Air Mail
2 RATE DIE	1ST CLASS A CR
3 DATE ADVANCE	03/19/02

ESCAPE	▲	▼	OK
--------	---	---	----

SLOGAN : you may select one Slogan from seven pre-loaded Slogans (plus two personalised Slogans).

RATE DIE : you may select one Rate Die from seven pre-loaded Rate Dies.




DATE ADVANCE : the posting date can be advanced by up to seven days.

8.3.1 Choosing a Slogan, Rate Die or Text


You can select a Slogan and/or Rate Die from a number of pre-loaded Slogans/Rate Dies.




Slogans, Rate Dies and Text messages may be combined within the same Imprint. (Provided the envelope or label is long enough to take the print).


The method of selection for Slogans, Rate Dies and Text is the same, therefore for the purpose of this example we will illustrate selecting a Slogan.

Using the  and  keys, or the appropriate number, make your selection from the list e.g. 1 **SLOGAN** and press  to confirm, the **SLOGAN** screen will be observed.

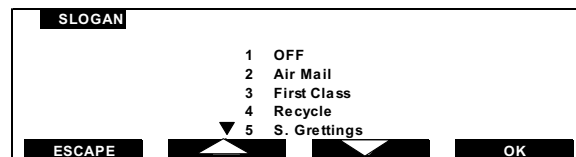If a slogan is already selected, that slogan will be highlighted:



Using the  and  keys, or the appropriate number, make your selection from the list, press  to confirm.

If you wish to retain the current selection, press the  key to return to the **IMPRINT** menu screen.

To return to **Ready Mode** screen press .



The Icon displayed in the top lefthand corner of the screen indicates that a slogan has been selected.

8.3.2 Date Advance (for Pre Dating Mail)


Your machine is fitted with its own calendar/clock, therefore current date setting is automatic. If you wish to prepare mail ahead of time it is possible to advance the posting date by up to seven days.

From the **IMPRINT** screen select **DATE ADVANCE**, the following screen will be observed:

The screen displays a title bar with "DATE ADVANCE". Below it is a list of five dates: 1 03/19/02, 2 03/20/02, 3 03/21/02, 4 03/22/02, and 5 03/23/02. A small downward-pointing arrow is positioned to the left of the date 03/22/02. At the bottom of the screen are three buttons: "ESCAPE" on the left, a central button with an upward-pointing arrow, and "OK" on the right.

Next, using the  and  keys, select from the list the date on which you wish to post your mail.

Press  to confirm and return to the **IMPRINT** screen.

To return to **Ready Mode** with the **Advanced Postage Date** displayed, press .

The screen shows a postage meter interface. In the top left corner is a small monitor icon. In the top right corner, the postage amount "\$0.00⁰" is displayed. Below this amount, the date "03/22/02" is shown inside an oval. On the left side of the screen, the text "\$150.20⁷" and "ACCOUNTS" are visible. At the bottom, there are three buttons: "DEPT", "MODE", and "IMPRINT". A line from the text "Advanced Postage Date" in the previous block points to the date "03/22/02".

YOU ARE NOW READY TO PROCESS YOUR PRE DATED MAIL

On completion of your pre dated mail run, your meter **MUST** be reset to the current date.

However, if the **Timeout** period is exceeded, your meter will go to **Standby** and the **Date Advance** setting be automatically cancelled.

9. MAINTAINING PRINT QUALITY




Under normal operating conditions, your IJ40/50/60 postage meter will produce excellent quality prints.

However, if lines are missing from the stamp or the machine has remained unused for several days it will be necessary to clean the Ink Cartridge.


9.1 Cleaning the Ink Cartridge


From Ready Mode, press the  key, the **MAIN MENU** screen will now be observed:



Using the  and  keys, or the appropriate number key, move the cursor to **CARTRIDGE** and press  to confirm.

The **CARTRIDGE** menu will now be observed:

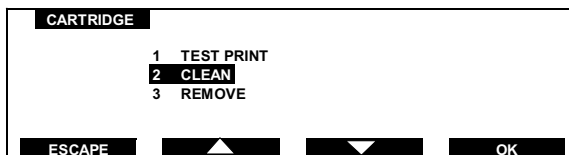


Select the **CLEAN** option from the list and press  to start the cleaning cycle.

On completion of the cleaning cycle the screen will revert to the **CARTRIDGE** menu.

You may now make a test print.

9.2 Making a Test Print

Select the **TEST PRINT** option from the **CARTRIDGE** menu and press **OK** to confirm.

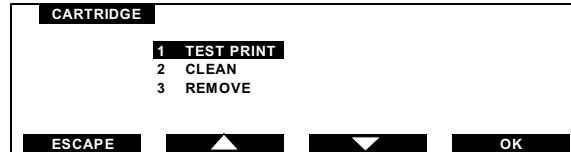



The prompt to produce a **Test Print** will now be displayed.



To make a **Test Print**, insert a blank envelope or card and press



Inspect the **Test Print** to ensure that all lines are clear and present.

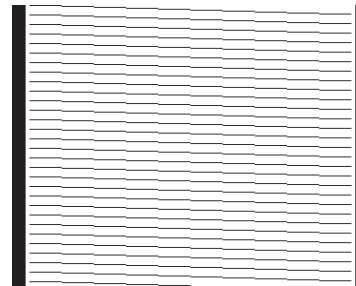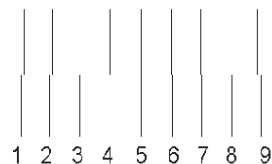

To set the alignment, enter the number that provides the straightest line (for the example above line 5) by pressing the appropriate numeric key on the keypad.

ENTER STRAIGHTTEST LINE NO.	
5	
ESC	OK

Press **OK** to confirm. If any lines are missing, repeat the cleaning and test print process up to three times, if this process fails to restore print quality, fit a new ink cartridge as detailed in "Replacing an ink cartridge".

If the test print is satisfactory, press **ESCAPE** twice to return to Ready Mode.

Low Ink

Should the ink cartridge require replacing, the **LOW INK** display will be observed:

LOW INK		\$0.95 ⁰
\$150.20 ⁷		03/19/02
ACCOUNTS		
DEPT	MODE	IMPRINT

You have approximately 200 impressions available, after which the Ink Cartridge **MUST** be replaced (see below).

No Ink


When the **NO INK** display is observed, printing is disabled and the Ink Cartridge **MUST** be replaced before any printing operations can be resumed.

NO INK		\$0.95 ⁰
\$150.20 ⁷		03/19/02
ACCOUNTS		
DEPT	MODE	IMPRINT

9.3 Replacing an Ink Cartridge


From Ready Mode, press the **MENU** key. Using the **▲** and **▼** keys, or the appropriate number key, move the cursor to **CARTRIDGE** and press **OK** to confirm.

Select the **REMOVE** option from the **CARTRIDGE** menu:

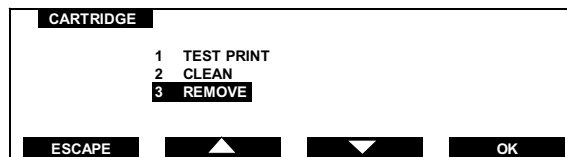


Press **OK** to confirm.

After a short time, the following screen will be observed:

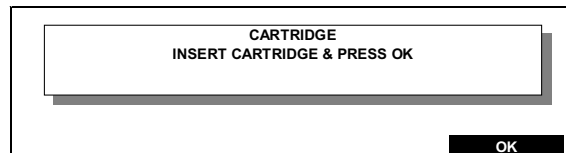

Open the machine top cover.


Press on the front of the Ink Cartridge as shown in order to remove it.

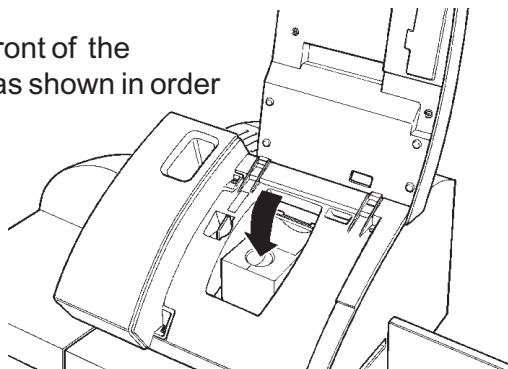


Carefully withdraw the used Ink Cartridge and discard.
Remove the new Ink Cartridge from its packaging and carefully remove the tape seals.



Do NOT touch or remove the copper strip on Ink Cartridges.

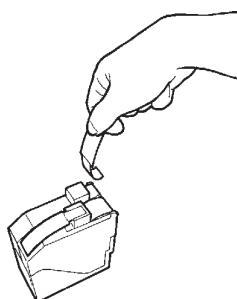


Place the new cartridge into its holder, and lock it in position by carefully pushing down on the depressed circle on top of the cartridge with your index finger, then using your thumb to push the rear of the ink cartridge in the direction illustrated.

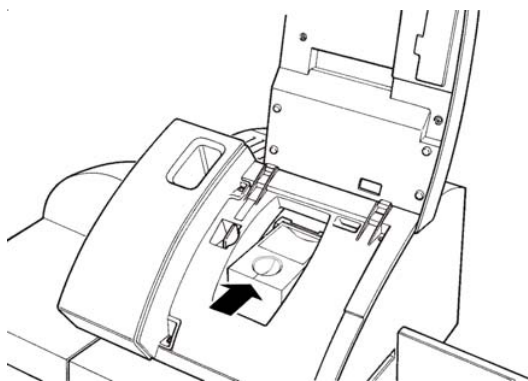

Close the machine top cover and press **OK** .

After a short delay the prompt to make a Test Print will be observed:

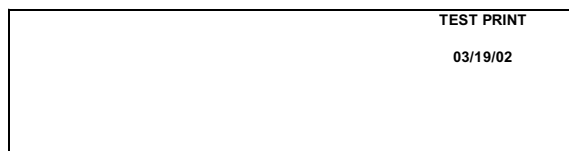

Please refer to "Making a Test Print".




To order your next IJ40/50/60 ink cartridge from Neopost, see Ordering Supplies on page 102.




10. METER REGISTERS

Your postage meter is equipped with a series of electronic registers to monitor postage printing transactions. A number of departments are available in which separate registers showing postage used and items printed are stored.




10.1 Selection

To select a Meter Register from Ready Mode, press the  key, the following screen will be observed:

MAIN MENU	
1	REGISTERS
2	CARTRIDGE
3	SUPERVISOR
4	CLEAR MAIL PATH
5	WEIGHING MODE Differential
ESCAPE	▲ ▼ OK

Using the  and  keys, or the appropriate number key, move the cursor to **REGISTERS** and press  to confirm, the list of registers available to view will now be displayed:


REGISTERS	
1	BATCH REGISTERS
2	POSTAGE SET
3	MAIN REGISTERS
ESCAPE	▲ ▼ OK

Using the  and  keys, or the appropriate number key, select a register option from the list then press  to confirm.
e.g. MAIN REGISTERS:

SUMMARY REPORT	
DESCENDING	\$150.20 ²
ASCENDING	\$749.70 ³
POST OFFICE ITEMS	540
ESCAPE	PRINT

10.2 Printing a register

To print a register press **PRINT**, if the method of print is set to Internal, the following screen will be observed:

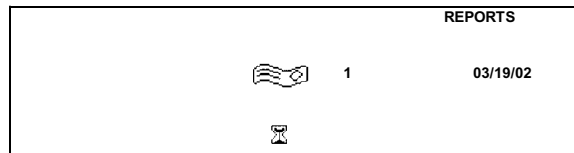

After a few seconds, your register data will be printed on a label and you will be returned to the **DEPARTMENT REGISTERS** screen. If during the register printing process the following display is observed:



First replenish the label dispenser as detailed in "Filling the label hopper", then press **CONTINUE** to complete the report printing process.

If after a short wait, you are returned to the register screen your method of print may be set to External Printer, please refer to **Printing with External Printer** below.



The method of print (Label or External Printer) is set in Supervisor Mode, please refer to "Reports".

Press **ESCAPE** to return to the **REGISTERS** screen.

To return to **Ready Mode**, press **ESC** twice.

10.3 Printing with External Printer

Before proceeding to print registers using an external printer ensure that the printer lead is connected to the Upper Accessory Port at the back of the machine, (please refer to Controls and Features) and that the printer power lead is connected to an adjacent power outlet.

Set the printer to **ON** and the status to **ONLINE**.

From your selected registers screen press **PRINT**, after a short period of time, you will be returned to the screen and the register data will have been printed.

If the registers screen does not re-appear after a few seconds and the printer does not print, re-check all printer connections and ensure that the printer status is set to **ONLINE**.


11. ADDING POSTAGE

Postage may be purchased from the Post Office, using the Neopost Postage-On-Call® system.

Connect one end of the telephone link cable to the Modem Socket () at the rear of the machine and the other end to an adjacent telephone line outlet. The meter only requires connection to the telephone line outlet during the Add Postage or Clear Lockout transaction.

From **Ready Mode**, press .


The **ENTER AMOUNT** screen will be observed.

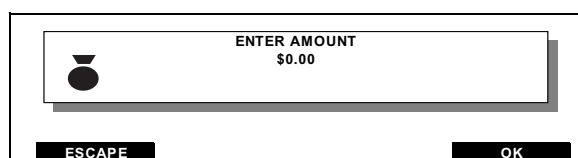

Using the numeric key pad, enter the amount of postage you wish to purchase (whole dollars only) e.g. 100.

Press: ①, ①, ① and **OK** to confirm.


You will now be asked to verify the amount before proceeding.

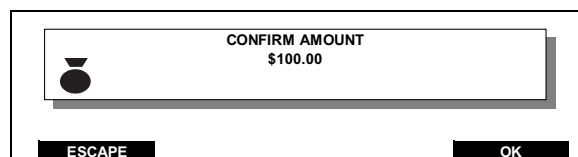

If amount incorrect, press **ESCAPE** and start again from the Enter Amount screen.

If the amount displayed is correct, press **OK** to confirm.


On completion of the **ADD POSTAGE** transaction, the following screen will be observed:

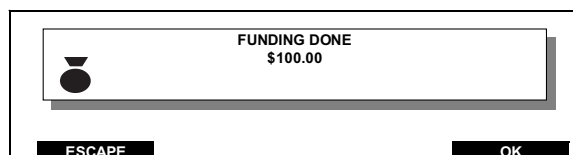


11.1 Warning pending Credit' Procedure

Completing an Interrupted Add Postage Transaction

If an Add Postage transaction is accidentally interrupted before the transfer has been completed, the **WARNING PENDING CREDIT** screen will be observed when returning from Locked mode after the machine has been unplugged.

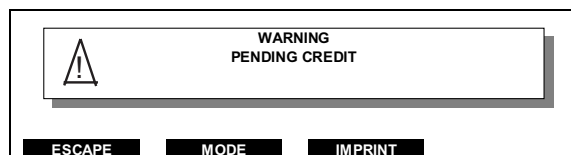

In this case, press **ESCAPE** to return to Ready Mode .


Press the FUNDS key  to automatically finish the incomplete transaction.

On completion of the Add Postage transaction, press **OK** to return to **Ready Mode**.


11.2 Clearing a PO lockout

USPS regulations require that your meter must be set at least once every three months. The meter has an internal timer that tracks your reset activity. After three months without adding postage, a PO LOCKOUT message is displayed and *postage printing is disabled*.

To clear the lockout:

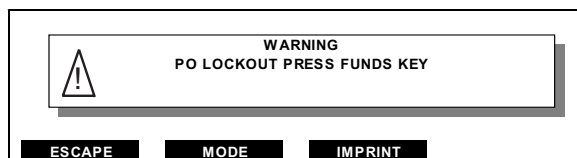

In this case, press **ESCAPE** to return to **Ready Mode**.

Press the FUNDS key  to automatically clear the PO Lockout. On completion of the Clear PO Lockout transaction, press **OK** to return to **Ready Mode**.



The machine only requires connection to the telephone line outlet during the Add Postage and Clear Lock-Out transaction.

12. MAINTAINING YOUR ACCOUNT

12.1 Account number

After you sign a rental agreement for your meter, you will be assigned a **POSTAGE-ON-CALL® (POC)** depositor account number. An account confirmation statement will be mailed to you indicating your account number. This number should be kept in a safe place, yet be readily available, because it is used for all **POC** account maintenance transactions.

12.2 Account balance


You can use the Neopost Automated Postage-On-Call® system to check your account. Simply call **1-800-867-3738** and use your touchtone phone to enter your account number and select the Account Query menu. You can then hear details regarding your **Account Balance** (includes the current balance, the available balance and any unpaid advances), **Last Deposit** (includes the check number, amount and date of deposit) or **Last Meter Resetting** (includes the date of the last setting transaction). For special account problems, you have the option of speaking to a customer service operator.

12.3 Statements

You will receive a monthly statement of all activity in your Postage-On-Call account. It includes deposits, remote meter settings, transaction fees and the ending account balance.

12.4 Post Office regulations

United States Postal Service regulations require that your meter must be audited at regular intervals (currently set at 90 days). For your convenience an audit is automatically performed each time you add postage.

If you do not add postage or perform an audit within a 90 day period, a “**PO LOCKOUT**” message is displayed on the meter and postage printing is disabled. To clear the lockout, simply press the  key and a **CLEAR LOCKOUT** transaction will be processed via the modem connection. When the transaction is completed, postage printing is enabled for another 3 months. See Clear Lockout.

12.5 No Deposit Postage-On-Call Account

No Deposit Postage-On-Call® Accounts do not require deposits to a USPS trust account. Postage and setting fees are electronically transferred direct from your bank account when you reset your meter. If you have a No Deposit Postage-On-Call® Account, *do not send checks for postage to the USPS trust account bank.*

If you are interested in setting up a No Deposit Postage-On-Call® Account, call the Neopost Help Desk for information.

12.6 Standard Deposit Postage-On-Call Account

Standard Postage-On-Call accounts are prefunded and require that money be in your USPS trust account to add postage to your meter. After using the **Neopost Postage-On-Call®** system to add money to your meter, your account decreases by the amount of the postage added plus any applicable **POC** transaction service charge. Remember to deposit sufficient funds to cover all service charges in addition to your planned setting withdrawals.

Upon receipt of the check, your **POC** account will be credited with your deposit (allow 4 to 6 working days for the check to be received and posted).



Send only your POC deposit, Do Not include any other payments to Neopost along with your check for postage.

- **Checks**

Make your check out to **United States Postal Service**, and write your **POC** account number on the check.

- **Deposit Slips**

Always enclose your preprinted deposit slip with your check. This will assure the fastest and most accurate bank processing. You will receive a package of 24 personalized deposit slips in the mail shortly after setting up your POC account. Replacements are re-ordered automatically when you submit your 20th deposit slip with your check.

- **Where To Mail Your Deposit**

There are three regional USPS Trust Account Lock Boxes to facilitate faster receipt of your deposit checks: **PA** - Pennsylvania, **IL** - Illinois and **NV** - Nevada. Refer to the reference table on the next page for the correct lock box for your zip code.

12.7 USPS Trust Account Regional Remittance Lock Boxes

<u>PA</u>	<u>IL</u>	<u>NV</u>
<u>Regular Mail</u> CMRS-POC P.O. Box 7247-0255 Philadelphia, PA 19170-0255	<u>Regular Mail</u> CMRS-POC P.O. Box 0575 Carol Stream, IL 60132-0575	<u>Regular Mail</u> USPS/Neopost P.O. Box 4715 Los Angeles, CA 900096-4715
<u>Overnight Mail</u> Citibank Delaware Attn: Lockbox #0255 1615 Brett Road New Castle, DE 19720	<u>Overnight Mail</u> Citibank Services Attn: Lockbox #0575 8430 W. Bryn Mawr Ave. 3rd Floor Chicago, IL 60631	<u>Overnight Mail</u> Postmaster Relationship- Lockbox Processing Mgmt. Attn: (4715) Neopost 5860 Upland Way Culver City, CA 90230

Wire Transfers To:

Citibank
CMRS / Neopost
Account # 4067-8625
Routing # 021000089

Detail Payment Field: POC Account #

ACH Transfers To:

Citibank
CMRS / Neopost
Account # 4067-8625
Routing # 021000089

Format CCD plus
Addenda Format:
REF*IC*xxxxxxx [xxxxxxx=your POC Acct #]
or
NTE*ALL*xxxxxxx [xxxxxxx=your POC Acct #]

12.8 Zip Code to Regional Remittance Lock Box Reference Table (Use first 3 digits of zip code)


Zip Code	Mail To	Zip Code	Mail To	Zip Code	Mail To	Zip Code	Mail To
004	PA	117-139	PA	267	PA	889-898	NV
0010-011	IL	140-147	IL	268-279	IL	900-906	IL
012	PA	148-149	PA	280-282	PA	907-916	NV
013-022	IL	150-154	IL	283-286	IL	917-918	IL
023-026	PA	155	PA	287-289	PA	919-922	NV
027-035	IL	156	IL	290-296	IL	923-931	IL
036-037	PA	157-159	PA	297	PA	932-939	NV
038-049	IL	160-165	IL	298-316	IL	940-941	IL
050-066	PA	166	PA	317-319	PA	942	NV
067	IL	167	IL	320-816	IL	943-944	IL
068-089	PA	168-199	PA	820-831	NV	945-948	NV
100-104	IL	200-208	IL	832-847	IL	949	IL
105-109	PA	209-219	PA	850-855	NV	950-953	NV
110-114	IL	220-253	IL	856-857	IL	954-955	IL
115	PA	254	PA	859-884	NV	956-969	NV
116	IL	255-266	IL	885	IL	970-999	IL

13. MEMORY FUNCTIONS


Frequently used print combinations may be pre-programmed as a memory function, five preset memory slots are available for selection.

13.1 Saving a Memory Function

Setup your preferred print combination, then press about 5 seconds the **M** key, the following screen will now be observed:

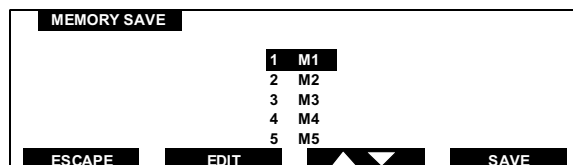

Select the Job Memory in which you wish to save your program. If you want to enter a name, press **EDIT**. You will then be prompted to enter a name for your Job Memory

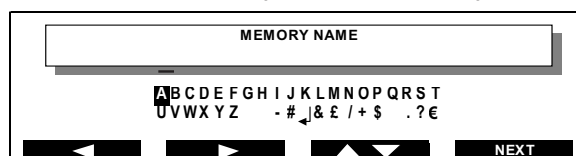

Use the **←**, **→** and **▲** keys to move the cursor to the character to be defined.

The **NEXT** key is used to confirm selection and move the cursor to the next character.

To delete a character press **C**.

To enter a number in the Memory Name, use the numeric keypad.

To return to the previous screen with the Memory Name unchanged press **C**.

To confirm your entry, press **OK**.


This operation will overwrite the previous memory setting.


Press **SAVE** to confirm.

To return to **Ready Mode** press **ESCAPE**.

13.2 Recalling a Memory Function

From **Ready Mode**, press (shortly) the **M** key to display the **MEMORY RECALL** screen; a list of memories will now be observed:

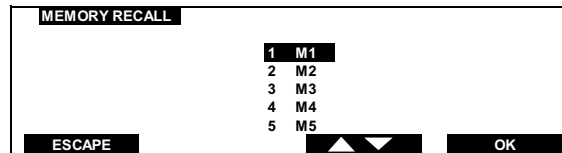

Using the  key or the appropriate numerical key, move the cursor to make your memory recall selection.

To confirm your selection, press **OK**.

To return to **Ready Mode**, press **ESCAPE**.

14. SUPERVISOR SETTINGS

14.1 Introduction

In **Supervisor Mode**, the supervisor can access all machine functions, except postage printing. Navigation procedure from screen to screen is the same as in the user mode, except that the supervisor mode includes a number of extra configuration function keys. By definition, the supervisor has free access to all the departments and as such he/she is not prompted by the machine to enter any code after the Supervisor Code has been entered.

For security purposes, only a supervisor or other responsible person should be permitted to make changes to these settings.

14.2 ENTRY TO SUPERVISOR mode


To enter **SUPERVISOR** mode from the Standby screen:



Press the **SUPERVIS** key.

Or from the **MENU** key in **USER** Mode by selecting **SUPERVISOR**.

The prompt to **ENTER SUPERVISOR PIN** will be observed:

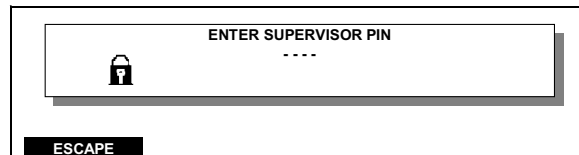

Enter the Supervisor **PIN**.

If an incorrect **PIN** is entered the machine will continue to prompt for **SUPERVISOR PIN Entry** until the correct **PIN** is used.

Having successfully entered Supervisor Mode, the **SUPERVISOR** screen will be observed:



The following functions may be accessed directly from the **Supervisor Ready** screen:

- SECURITY & DEPT** : allows the supervisor to access the department setup and security functions.
- REGISTERS** : provides access to registers
- LOAD FROM MEMORY CARD** : enables supervisor to enter data to the machine memory e.g. Advert Cards, Rate Cards (When postal rates change) and Town Cards (When you change location).
- SETUP** : allows access to machine setup.

14.3 Departments control

In Non-Departmental Operating mode, all values are assigned to **Department 0**.

In Departmental mode IJ40 has 35 departments, while IJ50 has 45 departments (option 1) or 100 (option 2), and IJ60 has 50 departments (option 1) or 150 (option 2) available for assignment by the supervisor.

From the **SUPERVISOR** menu, move the cursor to option **1 SECURITY & DEPT.**

Press **OK** to confirm.

The following screen will now be observed:

SECURITY & DEPT	
1 STATUS	DISABLED
2 SETUP DEPT	
3 DEPARTMENT SELECTION	PICK UP FROM LIST
4 LAST RESET ALL DEPT	00/00/00
5 USER PIN	0000
ESCAPE	OK




The following functions may be accessed directly from the **Departments Control** screen:


- | | |
|-----------------------------|---|
| STATUS | : allows supervisor to enable Departmental operation. |
| SET UP DEPT | : allows supervisor to setup Departments. |
| DEPARTMENT SELECTION | : allows supervisor to select the department. |
| LAST RESET ALL DEPT | : allows supervisor to reset All Registers to zero. |
| USER PIN | : allows supervisor to set the 4 digit User PIN. |
| USER STATUS | : allows supervisor to set the User Status. |



When in Departmental Operating Mode access to Non-Departmental Operating Mode (Department 0) is disabled.


14.3.1 Changing the User PIN


Using the  and  keys, or the appropriate number key, move the cursor to **2 USER PIN** and press  to confirm, the following screen will be observed:

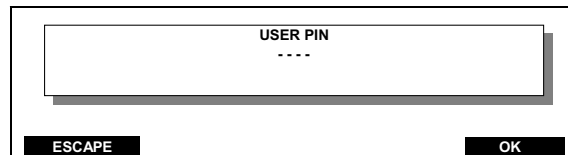

USER PIN
....




ESCAPE OK


To return to the previous screen with the User PIN unchanged, press .

To change the User PIN, enter the new 4 digit value, then press  to confirm.

To return to the **SUPERVISOR** screen press .



SETTING THE USER STATUS

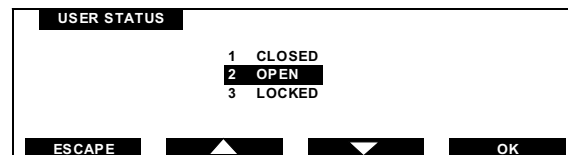
Using the  and  keys, or the appropriate number key, move the cursor to **6 USER STATUS** and press  to confirm, the following screen will be observed:



USER STATUS

1 CLOSED
2 OPEN
3 LOCKED

ESCAPE   OK

To return to the previous screen with the User Status unchanged, press .

Using the  and  keys, or the appropriate number key, make your selection and press  to confirm.

To return to the **SUPERVISOR** screen, press .

"LOCKED" will appear if you enter more than 8 bad codes.

To unlock, select "OPEN" and press .

14.3.2 To Assign a Department

From the **SECURITY & DEPT** menu, move the cursor to STATUS. Press **OK** to confirm.

The following screen will be observed:

STATUS	
1	DISABLED
2	ENABLED

ESCAPE	▲	▼	OK
--------	---	---	----

Using the **▲** and **▼** keys, or the appropriate number key, move the cursor to **ENABLED** and press **OK** to confirm, you will be returned to the **SECURITY & DEPT** screen with the status changed to **ENABLED**.

SECURITY & DEPT	
1 STATUS	ENABLED
2 SETUP DEPT	
3 DEPARTMENT SELECTION	PICK UP FROM LIST
4 LAST RESET ALL DEPT	00/00/00
5 USER PIN	0000




ESCAPE	▲	▼	OK
--------	---	---	----

Using the **▲** and **▼** keys, or the appropriate number key, move the cursor to **SET UP DEPT** and press **OK** to confirm.





The following screen will be observed:


SET UP DEPT	
1 DEPT 1	C

ESCAPE	▲	▼	OK
--------	---	---	----

Again using the  and  keys, or the appropriate number key, move the cursor to the Number you wish to set and press  to confirm, the **DEPARTMENT SETTINGS** screen for the selected department will be observed:

DEPT SETTINGS		
1	DEPT NAME	NONE
2	DEPT CODE	1
3	DEPT PIN	0000
4	STATUS	CLOSED
5	LAST RESET	00/00/00






   

To set a **Department Name**, move the cursor to **DEPT NAME** and press  to confirm, the following screen will be observed:



DEPT NAME


-


ABCDEFGHIJKLMN OPQRST
UVWXYZ -#_!&/+\$'.'? ,


    

Use the ,  and  keys to move the cursor to the character to be defined.

The  key is used to confirm the selection and move the cursor to the next character. To delete a character press .

To enter numbers in the text use the numeric keypad, you do not need to press the  key to confirm selection when entering numbers.


A department name is limited to 16 characters including spaces. To return to the previous screen with the Department Name unchanged press  until the screen changes to the previous one.

To confirm your entry press .

To Change a Department Name, select **DEPT NAME** as described above.

Using the **C** key, delete characters of the old Department Name. Press **C** as many times as required to erase the Department Name completely, then enter the new name as previously detailed.


To set a Department Code, move the cursor to **DEPT CODE** and press **OK** to confirm, the following screen will be observed:

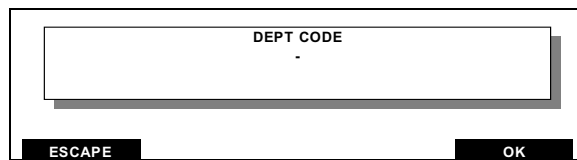A screenshot of a terminal screen. At the top, the text "DEPT CODE" is displayed. Below it is a large rectangular input field containing a single dash "-". At the bottom of the screen, there are two buttons: "ESCAPE" on the left and "OK" on the right.

Using the numerical keypad enter/change the account number, press **OK** to confirm.

To return to the previous screen with account number unchanged press **ESCAPE**.

To set a Department PIN, move the cursor to **DEPT PIN** and press **OK** to confirm, the following screen will be observed:

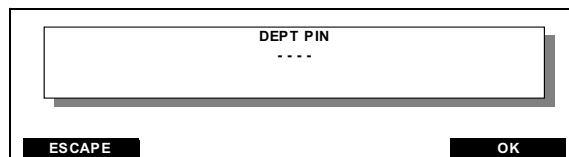A screenshot of a terminal screen. At the top, the text "DEPT PIN" is displayed. Below it is a large rectangular input field containing four dashes "----". At the bottom of the screen, there are two buttons: "ESCAPE" on the left and "OK" on the right.

To change the Department PIN, enter the new value, then press **OK** to confirm.

To return to the previous screen with the Department PIN unchanged, press **ESCAPE**.

To Change the Department Status, move the cursor to **STATUS** and press **OK** to confirm, the following screen will be observed:

STATUS	
1	CLOSED
2	OPEN
3	LOCKED
ESCAPE	OK

Using the **▲** and **▼** keys, or the appropriate number key, move the cursor to **OPEN** and press **OK** to confirm.

To Reset the Department Registers, move the cursor to **LAST RESET** and press **OK** to confirm, the following screen will be observed:

DEPT DATA WILL BE ERASED	
ESCAPE	CONTINUE

To return to the previous screen with data unchanged, press **ESCAPE**.

To reset current Department Data to zero, press **OK** to confirm, the following screen will now be observed with the current date displayed as **LAST RESET**:

DEPT SETTINGS		
1	DEPT NAME	NONE
2	DEPT CODE	1
3	DEPT PIN	0000
4	STATUS	OPEN
5	LAST RESET	03/03/02
ESCAPE	OK	

Your Department is assigned and ready for use.
To return to the **SUPERVISOR** screen press **ESCAPE**.

14.4 IJ40/50/60 machine setup menu

The **SETUP** menu provides access to the following supervisor functions :

1. High Value

A High Value Warning will be displayed in User Mode when a value exceeding or equal to the High Value threshold is selected, this value may be changed (Default High Value set to \$1.00)

2. Low Credit

The Low Credit Warning will be displayed in User Mode when the credit level falls below or equal to the Low Credit threshold, this value may be changed (Default Low Credit value set to \$50.00)

3. Time

The machine clock is set to local time, the year cannot be changed, however to facilitate Summer/Winter time may be changed.

4. Sleep Mode

If the machine is left for a period of time it will automatically return to Sleep Mode. The time out period may be changed (Default Sleep Mode time out set to 5 minutes)

5. Motor Timeout

Controls the length of time the motors run after processing the last item of mail; for instance inserter timeout is set for a few minutes.

6. Key Beep

May be set to sound when a key is pressed, this setting may be changed (Default set to ON)

7. Default Stamp Value

Enables the supervisor to define a default postage value (Default Stamp Value set to \$0.00).

8. Telephone Settings

The telephone numbers of the Neopost Postage-On-Call® Re-setting system and Helpdesk are stored in the mailing machine.

9. Registration

Enables Change Address, Audit and Withdrawal transactions.

10. Language

Details Language setting (Factory set to American English).

11. Report On

Enables the supervisor to determine report printing mode e.g. internal label printer, remote printer or PC (Factory set to internal label printer).

12. PC Connection

Allows the supervisor to enable or not PC LINK and/or PC ABSENT MODE.

13. Lock Keyboard

14. WP Feature

Allows the supervisor to activate WP 10 lb. (and higher), to select the appropriate geographic code and (optional) to activate the differential weighing.

MACHINE SETUP

From the **SUPERVISOR** menu, move the cursor to the **SETUP** option.

Press **OK** to confirm.

The following screen will now be observed:

SETUP	
1	HIGH VALUE \$10.00 ⁰
2	LOW CREDIT \$50.00 ⁰
3	TIME 09.50
4	SLEEP MODE 5
5	MOTOR TIMEOUT LONG

ESCAPE ▲ ▼ OK

High Value

From the **SETUP** screen select **HIGH VALUE** and press **OK** to confirm, the following screen will be observed:

HIGH VALUE
\$ 0.00

ESCAPE OK

To return to the **SETUP** menu with the original value unchanged, press **ESCAPE**.

To change the High Value, enter the new value (with no point or comma, e.g. 100 corresponds to \$1.00), then press **OK** to confirm.

To return to the **Supervisor Ready** screen, press **ESCAPE** twice.

Low Credit

From the **SETUP** screen select **LOW CREDIT** and press **OK** to confirm, the following screen will be observed:

LOW CREDIT
\$ 0.00

ESCAPE OK


To return to the previous screen with the original value unchanged, press **ESCAPE**.

To change the Low Credit Threshold, enter the new value (with no point or comma, e.g. 5000 corresponds to \$50.00), then press **OK** to confirm.

To return to the Supervisor Ready screen press **ESCAPE** twice.

Time

From the **SETUP** screen select **TIME** and press **OK** to confirm, the following screen will be observed:

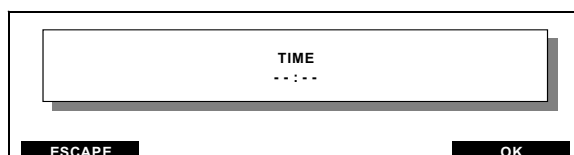

The screenshot shows a rectangular screen with a title bar at the top containing the word "TIME". Below the title bar is a large rectangular input field containing four dashes "----". At the bottom of the screen, there are two buttons: "ESCAPE" on the left and "OK" on the right.


To return to the previous screen with the Time Setting unchanged, press **ESCAPE**.

To change the Time Setting, enter the new value, (with no point or comma, e.g.:1345 corresponds to 1.45 pm, maximum variance \pm 3hours), then press **OK** to confirm.

To return to the **Supervisor Ready** screen, press **ESCAPE** twice.

Sleep Mode

From the **SETUP** screen, select **Sleep Mode** and press **OK** to confirm, the following screen will be observed:

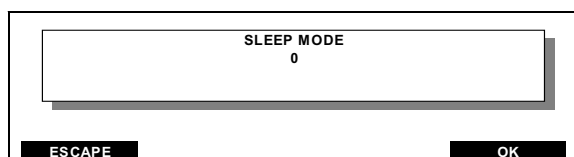

The screenshot shows a rectangular screen with a title bar at the top containing the words "SLEEP MODE". Below the title bar is a large rectangular input field containing the number "0". At the bottom of the screen, there are two buttons: "ESCAPE" on the left and "OK" on the right.


To return to the previous screen with the original value unchanged,, press **ESCAPE**.

To change the Sleep Mode time period, enter the new value (with no point or comma, e.g. 5 corresponds to 5 minutes), then press **OK** to confirm.

To return to the **Supervisor Ready** screen press **ESCAPE** twice.

Key Beep

From the **SETUP** screen select **KEY BEEP** and press **OK** to confirm, the following screen will be observed:

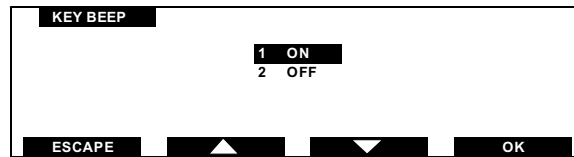


To return to the previous screen with the Setting unchanged, press **ESCAPE**.

Use the **▲** and **▼** keys to change the setting, then press **OK** to confirm.

To return to the Supervisor Ready screen press **ESCAPE** twice.

Default Stamp Value

From the **SETUP** screen, select **DEFAULT STAMP VALUE** and press **OK** to confirm, the following screen will be observed:

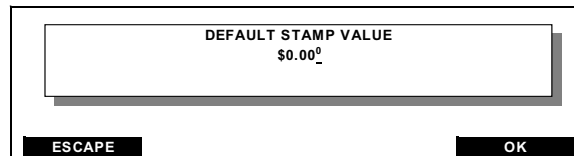

To return to the **SETUP** menu with the original value unchanged, press **ESCAPE**.

To change the **DEFAULT STAMP VALUE**, enter the new value (with no point or comma, e.g. 1000 corresponds to \$1.00⁰), then press **OK** to confirm.

To return to the **Supervisor Ready** screen press **ESCAPE** twice.

Registration

From the **SETUP** screen select **REGISTRATION** and press **OK** to confirm, the following screen will be observed:

The image shows a screen titled "REGISTRATION". Below the title, there is a list of three options: "1 CHANGE ADDRESS", "2 AUDIT", and "3 WITHDRAW". At the bottom of the screen, there are four buttons: "ESCAPE", an up arrow, a down arrow, and "OK".

Change Address

If you have changed your address, call the Neopost Helpdesk at 1-800-827-4543. A customer service representative will take your information and guide you through the update procedure.

Audit

USPS regulations require that your meter must be set at least once every three months and the meter has an internal timer that tracks your reset activity. If you wish to avoid a PO LOCKOUT, you can perform an AUDIT transaction any time prior to the timer expiration. When the Audit transaction is completed, postage printing is enabled for another 3 months.

Withdraw

The Withdraw procedure is only required if you are cancelling your meter contract or if there is a technical problem with your meter. Call the Neopost Helpdesk at 1-800-827-4543 and a customer service representative will take your information and guide you through the withdraw procedure. **Your meter should always be withdrawn before returning it to Neopost.**

Telephone Settings

The telephone number of the Neopost Postage-On-Call® re-setting center is stored in the mailing machine. This is used when you want to purchase postage.

Modification of the telephone number is permitted only by the supervisor. Such a setting may be necessary in case of modification of your telephone network (for example a new prefix for an external line), or if you are advised that the Neopost Postage-On-Call® number has changed.

Telephone Number Change

From the **SETUP** screen select **TELEPHONE SETTINGS** and press **OK** to confirm, the following screen will be observed:

TELEPHONE SETTINGS		
1	POSTAGE REFILL NO.	NONE
2	HELPDESK NO.	NONE
3	REMOTE NO.	NONE
4	PREFIX	NONE
5	PAUSE	0

▼

ESCAPE ▲ ▼ OK

If you are advised of a telephone number change, move the cursor to the number to be changed (e.g. **1 POSTAGE REFILL NUMBER**) and press **OK** to confirm, the following screen will now be observed:

POSTAGE REFILLNO.	
NONE	

ESCAPE OK

To return to the **SETUP** menu with the telephone number unchanged, press **ESCAPE**.

Or enter the new number using the numeric key pad, then press **OK** to confirm.

Changes to Prefix, Pause, Dialing method, Tone Detect and Dial Delay Settings




PREFIX If your outside line is routed through a switchboard, telephone numbers must be prefixed by the appropriate outside line digit (for most systems this is a 9 or a 0).


PAUSE With some telephone networks it may be necessary to enter a pause between the outside line digit and the telephone number.

DIALING METHOD You can choose the type of dialing.

tone detect You may wish to wait for a dial tone to be detected before dialling out.


DIAL DELAY You may wish to enter a delay between dialing attempts (in seconds).

Using the  and  keys, or the appropriate number key, move the cursor to make a selection and press  to confirm, the following typical screen will be observed:

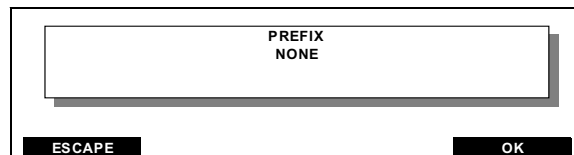

PREFIX
NONE

ESCAPE OK

Using the numerical key pad enter your prefix and press  to confirm.

Or, to return to the **TELEPHONE SETTINGS** screen with the prefix unchanged press .

14.5 Memory Cards

The following memory cards are currently available from Neopost:


Slogan Cards (one message per card)

Rate Card (when postal rates change)


14.5.1 How To Load Data Using a Memory Card

The following example illustrates the loading of a slogan/message, (remember only 2 slogans/messages can be stored in the machine at any one time in addition to the 7 preloaded slogans).

1. From the **SUPERVISOR** screen select **LOAD FROM MEMORY CARD** and press **OK** to confirm, the following screen will be observed:

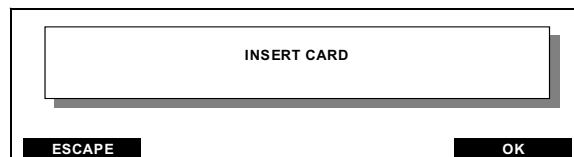


Insert the memory card face uppermost into the card reader, on the right hand side of the machine as illustrated:

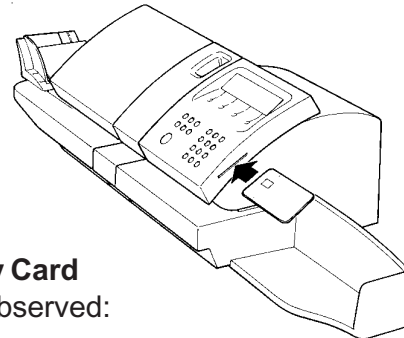


2. Press **OK** to confirm.

The prompt to load the **Memory Card Message/Slogan** will now be observed:

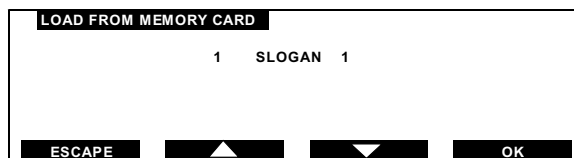


To return to the previous screen press **ESCAPE**.

3. Press **OK** to initiate the downloading operation:
On completion of the downloading process the following screen will be observed:

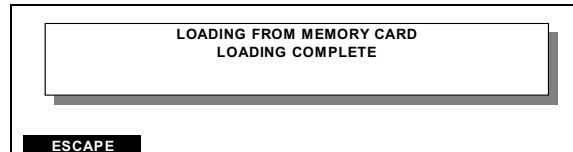

14.5.2 How To Replace Data Using a Memory Card


Repeat operations 1 and 2 then:
Press **OK** to confirm.
The following display will now be observed:

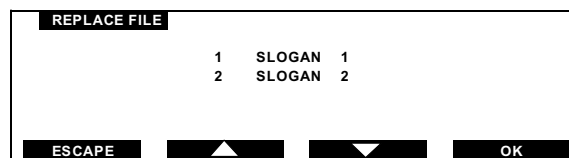

If you do not wish to replace a file, press **ESCAPE** twice to return to the **Supervisor Ready** screen.

If you wish to replace a file, use the **▲** and **▼** keys, or the appropriate number key to move the cursor to the message/slogan to be replaced.

Now press **OK** to initiate the downloading operation.
On completion of the downloading process, the following screen will be observed:

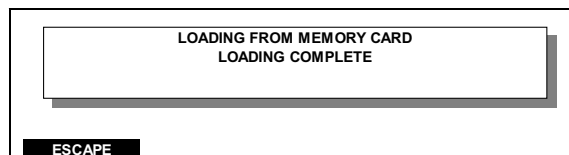

To return to the **Supervisor Ready** screen press **ESCAPE** twice.

15. REPORTS

Supervisor Reports can be printed using the mailing machine's self adhesive label printer or by connection to an approved external printer. Your IJ40/50/60 has been factory set for internal (**LABEL**) printing, to select external (**PRINTER**) printing, see below.

15.1 Typical Reports

DEPARTMENT REGISTERS		
DEP NAME	TOTAL	ITEMS
MARKETING	\$235.67	759
R & D	\$27.12	69
ACCOUNTS	\$8.52	18
SALES	\$107.52	512

15.2 Printing a Report

Starting from the **SUPERVISOR** menu, move the cursor to the **REGISTERS** option.

Press **OK** to confirm.

The following screen will now be observed:

REGISTERS

1 SET-UP

2 MAIN REGISTERS




3 EVENTS



4 WEIGHING PLATFORM REPORT


5 DEPARTMENT REGISTERS



ESCAPE

OK

Using the  and  keys, or the appropriate number key, select a register option from the list and press  to confirm.
e.g. 5 DEPARTMENT REGISTERS:

DEPARTMENT REGISTERS		
DEPT NAME	DEPT NO	POSTAGE ITEMS
DEPT 1		0.000
	00/00/00	0
ESCAPE		 PRINT

To print a register press , if the method of print is set to **LABELS** (Internal), the prompt to FEED LABEL will be observed:

REPORTS		
	1 0	03/19/02
		

Press  .

When report printing is initiated, the screen will display a label icon with a block/label number alongside. This number decrements as report printing progresses, (nine department label blocks for IJ40, twelve for IJ50), plus one label containing the user report).

On completion of printing, the **DEPARTMENT REGISTERS**. screen will be observed.

If the method of print is set to **EXTERNAL PRINTER**, please refer Printing with External Printer below.

 *To change the method of print please refer to Setting the Print Destination below.*

Press **ESCAPE** to return to the **REGISTERS** screen.
To return to **SUPERVISOR** screen press **ESCAPE** twice.

15.3 Setting the Report Destination

From the **SETUP** screen select **REPORT ON** and press **OK** to confirm, the following screen will be observed:



REPORT ON

1 LABEL
2 EXTERNAL PRINTER

ESCAPE ▲ ▼ OK

Using the **▲** and **▼** keys, or the appropriate number key, move the cursor to make a selection and press **OK** to confirm. Or, to return to the **SETUP** screen with the print destination unchanged press **ESCAPE**.

15.4 Printing with External Printer

Before proceeding to print registers using an external printer ensure that the printer lead is connected to the Upper Accessory Port at the back of the machine, (please refer to "Controls and Features") and that the printer power lead is connected to an adjacent power outlet.

Set the printer to **ON** and the status to **ONLINE**.

From your selected registers screen, press **PRINT**, the **WAIT** screen will now be observed:



After a short period of time, the screen will return to **DEPARTMENT REGISTERS** and the registers will have been printed.

Reports 95



*There is no external printer feedback to your mailing machine, therefore If the department registers screen does not re-appear after a few seconds and the printer does not print, re-check all printer connections and ensure that the printer status is set to **ONLINE**.*

16. TROUBLE SHOOTING

PROBLEM	SOLUTION
IJ40/50/60 will not start:	Is the IJ40/50/60 connected to the power supply? Is the main power outlet switch set to ON? Is the machine Top Cover properly closed? Check plug fuse (5A). Check machine fuse (1.6A).
The printer does not operate:	Is the printer switched to ON? Is the printer connected to the power supply? Is the main power outlet switch set to ON? Check plug fuse. Have you selected the correct print mode? (please see "Setting the report destination").
The Autofeed does not operate	Check the connection to the IJ40/50/60 (please see "Machine connections").
The machine does not print:	Check that you have made the correct Print Mode Selection (please see "Printing options"). Did you remove the protective tape from the Ink Cartridge before fitting? (please see "Replacing an ink cartridge").
Poor print quality:	Clean the Inker (please see "Cleaning the ink cartridge").
Envelopes not fed properly or fed double:	Autofeed incorrectly loaded (please see "Postage printing with autofeed").

Troubleshooting 97

PROBLEM

SOLUTION

Labels do not feed properly:

Avoid leaving the labels in the machine for too long.
Avoid overloading the dispenser (50 max).

The scale does not communicate with the machine:

Check the scale connection (please see "Machine connections").

PC connection link

In supervisor mode:

- 1) check your PC connection parameters;
- 2) - check your MMII PC application is open on your PC
- check your physical connection between the PC and the mailing machine.
- switch OFF and ON your mailing machine to reboot the link.

17. QUICK REFERENCE GUIDE

HOW TO	USER	▼	To Choice	OK
Department/User	1 2 3 4	3 4		
Enter PIN (e.g. 1 2 3 4)	1 2 3 4			
Set Value (e.g. 95 ⁰ cents)	9 5	0	OK	
Confirm High Value (e.g. \$12.50 ⁰)	1 2 5 0	0	Are you sure	OK
Set Print Mode	MODE	▼	To Choice	OK
Select Slogan	IMPRINT	▼	Advert	OK
Select Text Message	IMPRINT	▼	Text Message	OK
Advance Date	IMPRINT	▼	Date Advance	OK
Print Label	9 5 0	0	OK Label Quantity	OK
Recall Memorised Jobs	M	▼	Memory Recall	OK
Recredit (e.g. \$100.00)	0	1 0 0	0	OK
Display Registers	MENU	▼	Registers	OK
To Print Registers	As Registers	PRINT	ESCAPE	ESCAPE
			To Choice	OK
			Memory 1 or 2	OK
			ESCAPE	ESCAPE
			ESCAPE	ESCAPE
			ESCAPE	ESCAPE
			START STOP	

18. INTERNATIONAL LETTER POST COUNTRY CODE CHART

COUNTRY TO RATE GROUP REFERENCE TABLE

<u>Country</u>	<u>Rate Group</u>	<u>Country</u>	<u>Rate Group</u>	<u>Country</u>	<u>Rate Group</u>
A		Chad	5	Great Britain & Northern	
Afghanistan	5	Chile	5	Ireland	3
Albania	5	China	5	Greece	3
Algeria	5	Colombia	5	Greenland	3
Andorra	3	Comoros	5	Grenada	5
Angola	5	Congo, Democratic Republic of	5	Guadeloupe	5
Anguilla	5	the	5	Guatemala	5
Antigua & Barbuda	5	Congo, Republic of the	5	Guinea	5
Argentina	5	Costa Rica	5	Guinea-Bissau ¹	5
Armenia	5	Cote d'Ivoire	5	Guyana	5
Aruba	5	(Ivory Coast)	5	H	
Ascension	5	Croatia	5	Haiti	5
Australia	4	Cuba	5	Honduras	5
Austria	5	Cyprus	5	Hong Kong	5
Azerbaijan	5	Czech Republic	5	Hungary	5
B		D		I	
Bahamas	5	Denmark	3	Iceland	3
Bahrain	5	Djibouti	5	India	5
Bangladesh	5	Dominica	5	Indonesia	5
Barbados	5	Dominican Republic	5	Iran	5
Belarus	5	E		Iraq	5
Belgium	3	Ecuador	5	Ireland (Eire)	3
Belize	5	Egypt	5	Israel	3
Benin	5	El Salvador	5	Italy	3
Bermuda	5	Equatorial Guinea	5	J	
Bhutan	5	Eritrea	5	Jamaica	5
Bolivia	5	Estonia	5	Japan	4
Bosnia-Herzegovina	5	Ethiopia	5	Jordan	5
Botswana	5	F		K	
Brazil	5	Falkland Islands	5	Kazakhstan	5
British Virgin Islands	5	Faroe Islands	3	Kenya	5
Brunei Darussalam	5	Fiji	5	Kiribati	5
Bulgaria	5	Finland	3	Korea, Democratic People's	
Burkina Faso	5	France	3	Republic of (North)	5
Burma (Myanmar)	5	French Guiana	5	Korea, Repub. of (South)	5
Burundi	5	French Polynesia	5	Kuwait	5
C		G		Kyrgyzstan	5
Cambodia	5	Gabon	5	L	
Cameroon	5	Gambia	5	Laos	5
Canada	1	Georgia, Republic of	5	Latvia	5
Cape Verde	5	Germany	3	Lebanon	5
Cayman Islands	5	Ghana	5	Lesotho	5
Central African Republic	5	Gibraltar	3	Liberia	5

COUNTRY TO RATE GROUP REFERENCE TABLE

<u>Country</u>	<u>Rate Group</u>	<u>Country</u>	<u>Rate Group</u>	<u>Country</u>	<u>Rate Group</u>
Libya	5	Poland	5	Tanzania	5
Liechtenstein	3	Portugal	3	Thailand	5
Lithuania	5	Q		Togo	5
Luxembourg	3	Qatar	5	Tonga	5
M		R		Trinidad & Tobago	5
Macao	5	Reunion	5	Tristan da Cunha	5
Macedonia, Republic of	5	Romania	5	Tunisia	5
Madagascar	5	Russia	5	Turkey	5
Malawi	5	Rwanda	5	Turkmenistan	5
Malaysia	5	S		Turks & Caicos Islands	5
Maldives	5	St. Christopher (St. Kitts) &		Tuvalu	5
Mali	5	Nevis	5	U	
Malta	5	Saint Helena	5	Uganda	5
Martinique	5	Saint Lucia	5	Ukraine	5
Mauritania	5	Saint Pierre & Miquelon	5	United Arab Emirates	5
Mauritius	5	Saint Vincent & Grenadines		Uruguay	5
Mexico	2	5	San Marino	Uzbekistan	5
Moldova	5	3	Sao Tome & Principe	V	
Mongolia	5	5	Saudi Arabia	Vanuatu	5
Montserrat	5	5	Senegal	Vatican City	3
Morocco	5	5	Serbia-	Venezuela	5
Mozambique	5	Montenegro (Yugoslavia)	5	Vietnam	5
N		Seychelles	5	W	
Namibia	5	Sierra Leone	5	Wallis &	
Nauru	5	Singapore	5	Futuna Islands	5
Nepal	5	Slovak Republic (Slovakia)	5	Western Samoa	5
Netherlands	3	Slovenia	5	Y	
Netherlands Antilles	5	Solomon Islands	5	Yemen	5
New Caledonia	5	Somalia ¹¹	5	Z	
New Zealand	4	South Africa	5	Zambia	5
Nicaragua	5	Spain	3	Zimbabwe	5
Niger	5	Sri Lanka	5		
Nigeria	5	Sudan	5		
Norway	3	Suriname	5		
O		Swaziland	5		
Oman	5	Sweden	3		
P		Switzerland	3		
Pakistan	5	Syrian Arab Republic			
Panama	5	(Syria)	5		
Papua New Guinea	5	T			
Paraguay	5	Taiwan	5		
Peru	5	Tajikistan	5		
Philippines	5				
Pitcairn Island	5				

19. ORDERING SUPPLIES

For IJ40/50/60 Meter Supplies: Order on-line at www.neopostinc.com.
Call toll free 1-800-735-5343
Contact your local authorized Neopost dealer

<u>Item</u>	<u>Part Number</u>
Ink Cartridge, Fluorescent Red -----	4105243U
Labels (single, pack of 300) -----	7465233-01
Use when printing meter stamps with or without advertisements	
IJ40/50/60 Postage Meter User's Guide -----	4127761A
Custom Advertisement Memory Cards -----	Call Consumable Supplies Order Desk for assistance

CONTACTING NEOPOST

Neopost Inc.
30955 Huntwood Avenue
Hayward, CA 94544-7084

www.Neopostinc.com

Customer Service Helpdesk ----- 1-800-827-4543
Call for Product Questions and Technical Support

Consumable Supplies Order Desk ----- 1-800-735-5343
Call to order meter supply items and accessories

Postage-On-Call® Automated Account Information ----- 1-800-867-3738
Call to check Account Balance, Last Deposit or Last Meter Resetting via touch-tone telephone

Postage-On-Call® Modem Telephone Number ----- 1-866-296-1331
Modem telephone number set up in meter


Ordering supplies

102

USER'S GUIDE

IJ40/50/60

MAILING MACHINE

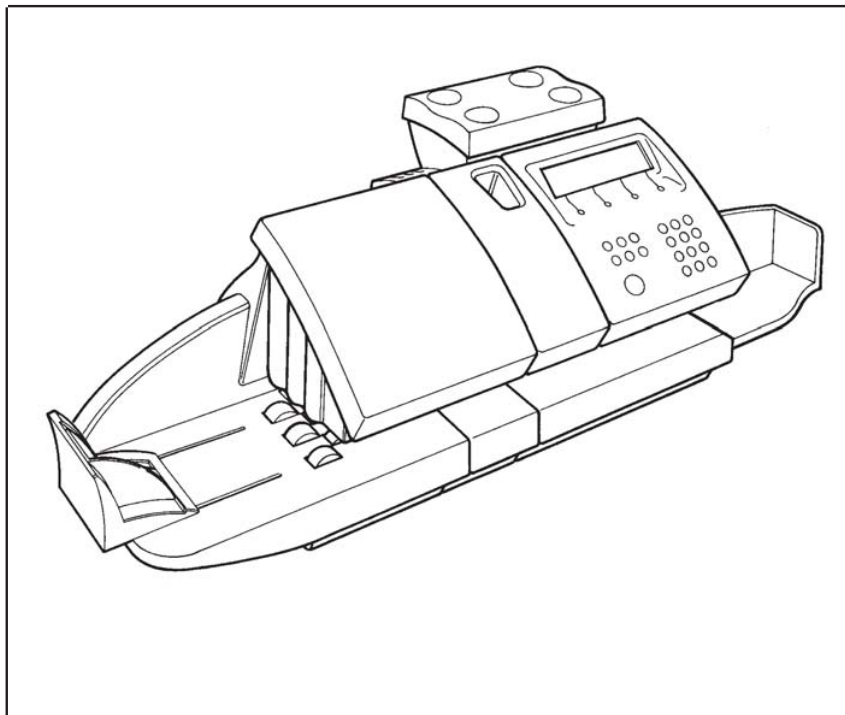

 neopost



4127761A/A - 05/11/2004